

Susquehanna County Conservation District



Small Project Erosion and Sedimentation Control Plan Guide

"Preserving and protecting the resources of Susquehanna County"

89 Industrial Drive Montrose PA 18801

Phone: (570) 782-2105

Fax: 782-2106

Conditions for use of this guide:

Total earth disturbance greater than 5,000 square feet, but less than 43,560 square feet (i.e. one acre)

Submissions not including a complete package (pages **1-17 of this document plus the District's 2-page() E&SCP Plan Review Application) will not be reviewed.**

The District may request more detailed plans (i.e. engineered E&SPC plans), based on scope of earth work being proposed.

Please include your municipal stormwater management permit application when submitting this guide to the District.

Table of Contents

INTRODUCTION, PURPOSE, & CONSIDERATIONS..... PAGE 3-4

- (Pages 6-8 Site Assessment must be done prior to E&S Plan)

NARRATIVE..... PAGE 9

INCLUSIONS, SUGGESTIONS, & RECOMMENDATIONS..... PAGE 10-11

UP-SLOPE DRAINAGE & DETAIL SHEETS REFERENCE..... PAGE 5

SMALL PROJECT E&S CONTROL PLAN APPLICATION.....PAGES 8-9

BEST MANAGEMENT PRACTICES (BMPs)PAGES 19-36

- Rock Construction Entrance (page 19)
- Straw Bale Barrier (page 20-21)
- Rock Filter Outlet (page 22)
- Compost Filter Sock (page 23)
- Filter Fabric Fence (Silt Fence) (page 24-27)
- Compost Filter Berm (page 28)
- Compost Filter Sock (page 29)
- Wood Chip Filter Berm (page 30)
- Rock Filter (page 30-32)
- Waterbar (page 33-34)
- Sediment Filter Log (Fiber Log) (page 35-36)

APPENDICES A, B, C, & D.....PAGES 26-29

STREAM CLASSIFICATION.....PAGES ?

GLOSSARY..... PAGE 44

INTRODUCTION

Noticing low levels of sediment in the streams and rivers of Pennsylvania during times of high flows and velocities is a natural event known as sedimentation. However, accelerated erosion and sediment pollution resulting from human activities, smothers and destroys aquatic life. It also causes losses of valuable topsoil and impairs water quality. Sediment pollution is the single largest pollutant, by volume, to the streams and waterways of the Commonwealth. Sediment pollution can simply be defined as any man-made earth disturbance that leads to increases in sediment (clays, silts, sands, and other “mud”) levels in streams, wetlands, and watercourses.

In an attempt to control accelerated erosion and sediment pollution, the Pennsylvania Department of Environmental Protection (PA DEP) adopted Chapter 102, Erosion and Sediment Control Rules and Regulations, in accordance with the PA Clean Streams Law.

Under current Chapter 102 regulations, anyone involved with an earth disturbance activity (i.e. digging, grubbing, grading, or in any way disturbing the topsoil) exceeding 5,000 square feet or more is required to develop, implement, and maintain an Erosion and Sediment (E&S) Control Plan. This Plan must be submitted to the Susquehanna County Conservation District if required by the municipality in which the earth disturbance activity is to be conducted or if requested by the District. **REMEMBER: Both Chapter 102 and the PA Clean Streams Law regulations specify that there may be an equal responsibility between both the landowner and contractor if sediment-laden waters are discharged from the construction site.**

PURPOSE OF THIS GUIDE

This document was designed to assist landowners in developing and implementing an E&S Control Plan for small-scale, low-hazard projects. Use of this guide may be limited to:

- Projects where earth disturbance activities are greater than 5,000 square feet, but less than 43,560 square feet (i.e. one acre).
- Projects where the existing slopes on the site are either A, B, or C, and do not exceed 15% (Note: the slope criterion is based on the soil symbols located within the *Soil Survey of Susquehanna County, PA*).
- Projects with no associated impact to wetlands, streams, or major waterways (i.e. a Chapter 105 General Permit – GP is not applicable for this type of Plan).

CONSIDERATIONS IN PLAN DEVELOPMENT

Practice Proper Site Grading-Hold Grading to a Minimum

The risk of severe erosion increases in a direct proportion to the amount of an individual site's earth disturbance. Excessive cutting and filling may alter the ground water system, open seeps, create sinkholes, and expose unstable soils. Improperly compacted fills may also be extremely erosive. Cutting, filling, and road grades over 10% require more intensive stabilization and often result in more long-term stabilization problems. All of the topsoil from areas where cuts and fills have been made should be stockpiled and redistributed uniformly during the final grading stage of the project. This is the key to properly re-vegetating the site.

Save Existing Vegetation, Especially Trees

A vegetative cover is the best and most economical protection against soil erosion. Vegetation and trees should be protected during construction to prevent damage from equipment (i.e. secure an area around the tree root systems so that they are not destroyed).

Minimize the Area and Time of Exposure

Any disturbed area should be stabilized as soon as the earth disturbance activity is completed or the earth moving activities have temporarily ceased (i.e. usually this means the area should be seeded and mulched). Minimize the amount of disturbed ground at any given time. Sequence the construction such that only the areas to be immediately worked on are disturbed. Permanent site stabilization should not be postponed until the entire project is completed (ex. a stone base should be applied immediately after the driveway has been excavated).

Protect Any Watercourses or Wetlands

Install temporary Best Management Practices (BMPs), such as straw bales, silt fence, or silt socks in order to prevent sediment pollution to Commonwealth waters. Remember the basic idea: “We All Live Downstream”.

Maintenance

Plan to inspect and repair all E&S Control BMPs after every significant rain event, and at the end of each week, at a minimum. Remember that E&S Control BMPs are not totally maintenance free (i.e. rock construction entrances become encrusted with extraneous soils, silt fences become overwhelmed with sediment, and re-vegetated areas sometimes wash out prior to permanent vegetation becoming established).

WHAT SHOULD BE INCLUDED IN AN EROSION AND SEDIMENT CONTROL PLAN?

1. Complete Plot Plan drawing (not to scale – refer to pg. 15-17).
2. Existing topography of the site (slope directions and estimated grades).
3. Location of any water bodies (streams, ditches, springs, etc.).
4. Brief description of the proposed project.
5. Types of E&S Control BMPs to be used and their locations on the site.

SOME SUGGESTIONS FOR A CONSTRUCTION SEQUENCE

1. Cut and install a stone-based driveway or access area for equipment such as a rock construction entrance.
2. Install all temporary E&S Control BMPs such as straw bales, silt fence, etc.
3. Strip topsoil from areas where work will begin, stockpile for final stabilization of site.
4. Construct buildings(s) and begin rough grading activities.
5. Finish grading and permanently stabilize entire site with seed, mulch, stone, etc.
6. Remove all temporary BMPs after site is completely stabilized (i.e. a minimum of at least 70% uniform perennial vegetative cover with a density able to resist accelerated erosion).

SEEDING AND MULCHING RECOMMENDATIONS

Temporary Seeding Recommendations/Mixtures

If temporary seeding is necessary, follow the chart below. Then, when final stabilization is to be completed, apply the remainder of the recommendations below for lime and fertilizer prior to final seeding and mulching. Annual Ryegrass is a quick germinating species of grass that can be seeded at almost any time. If you plan to leave your project or part of your project area inactive before final stabilization/permanent cover is achieved, a temporary seeding should be applied immediately. General recommendations are as follows:

Lime	1 ton per acre	50 lbs. per 1000 square feet
Fertilizer	150 lbs. per acre	5 lbs. per 1000 square feet
Annual Ryegrass	40 lbs. per acre	1 lbs. per 1000 square feet

Permanent Seeding Mixtures

Establishing a permanent vegetative cover is the final step to effective erosion and sediment pollution control. It is recommended that the Penn State Agronomy Guide be consulted (available from PSU Cooperative Extension or the Susquehanna County Conservation District). All mixtures below are for 100% Pure Live Seed (PLS). Depending on your percent of PLS, you may have to adjust recommendations accordingly. General recommendations are as follows:

Lawn and Mowed Areas

A. Kentucky Bluegrass	30 lbs. per acre	12 oz. per 1000 square feet
Redtop	3 lbs. per acre	2 oz. per 1000 square feet
Perennial Ryegrass	20 lbs. per acre	8 oz. per 1000 square feet
B. Pennlawn-Fine Fescue	40 lbs. per acre	16 oz. per 1000 square feet
Redtop	3 lbs. per acre	2 oz. per 1000 square feet
Perennial Ryegrass	20 lbs. per acre	8 oz. per 1000 square feet

Slopes and Un-Mowed Areas

Crown Vetch	25 lbs. per acre	10 oz. per 1000 square feet
Perennial Ryegrass	25 lbs. per acre	10 oz. per 1000 square feet

Note: Crown Vetch is a legume and requires an inoculant. Contact your seed supplier for more specific information. Although providing a thick ground cover, crown vetch is also an extremely aggressive invasive species, offering little wildlife benefit. Use with caution.

Timing of Permanent Seeding

For best results, grass and legume seeding should be completed in the spring; however, with proper establishment techniques, disturbed sites can be seeded almost anytime from spring to fall. General rules are as follows: legume seeding needs 10-12 growing weeks prior to hard frost and grasses generally require 4-6 weeks of growth prior to hard frost.

Lime

Adding agricultural grade limestone to a site is often the key to establishing vegetation. Soil tests from a reputable source such as the U.S. Farm Service Agency are recommended. But in the case where test results are not available, use the guide below.

Fertilizer – Commercial Type 10-20-20

The need for fertilizer cannot be underestimated. Soil tests are again recommended, but the guide below can be used in their absence.

Mulch (Straw, Hay, or Bark)

All areas that are subject to stabilization, whether it be with the temporary or permanent seeding specifications, should be mulched. Mulch is a loose layer of straw, hay, or bark that is at least 1" in depth. Mulch reduces the potential for erosion of soils and aids in seedling germination. Reference the specific recommendations by using the guide below.

Lime	4 tons per acre	190 lbs. per 1000 square feet
Fertilizer	930 lbs. per acre	25 lbs. per 1000 square feet
Mulch (Straw, Hay, or Bark)	3 tons per acre	140 lbs. per 1000 square feet

UP - SLOPE DRAINAGE

It is important to consider the aspect of stormwater and off-site runoff as it could affect your site. Areas up-slope of your construction site may allow large amounts of water to run onto your site. This water should be diverted around or through your site in such a way that this water does not pick up any additional sediment from your construction activities. The basic concept is to keep the clean water clean, and treat the dirty (sediment-laden) water before it leaves your site. Downspouts, swale outlets, parking lots, and other items that collect and concentrate water have the potential to cause soil erosion both on your site and on adjoining properties. Take care to plan for stormwater related issues during construction.

E&S CONTROL PLAN DETAIL SHEETS (REFER TO PGS. 15-16)

This section is primarily devoted to providing a detailed installation instruction for E&S Control BMPs, and general rules of thumb as to when each BMP should be used. This guide is designed so landowners can plan for and install E&S Control BMPs to minimize accelerated erosion, and meet both the regulations set forth in Chapter 102 and the PA Clean Streams Law. The details that follow were excerpted from PA DEP's *Erosion and Sediment Pollution Control Program Manual*, March 2012. These are not the only BMPs that can be used, but are ones that have been previously reviewed, approved, and recommended.

This guide is not intended to be a substitute for E&S Control Plans developed for complex, multiple acre, or high-hazard sites. Professional engineering consulting firms should be considered for sites requiring permanent E&S Control BMPs or sites where the potential for sediment pollution to Commonwealth waters are high. The Susquehanna County Conservation District will gladly assist you in completing this Small Project E&S Control Plan guide and also aide you in determining if a more "detailed" E&S Control Plan will be necessary.

EROSION AND SEDIMENT CONTROL PLAN INFORMATION SHEET

PROJECT SITE CHARACTERISTICS

A. Project Location/Topographic Map Please include a copy of a U.S. Geological Services (USGS) topographic map that includes the approximate location of your project site drawn on the sheet. You can print a copy from your computer by accessing: <http://mapper.acme.com/> (Type in your property address in the search box on the bottom left of the screen. Then click "Topo" in the menu in the top right of the screen. Zoom in as close as the program will let you, and click "Print".) Hard copies of USGS topographic maps are also available at the conservation district's office.

B. Name of Nearest Watercourse _____ (E.g. Creek, wetland, roadside swale) Chapter 93 classification of streams or other water bodies _____ (E.g. Cold Water Fishery (CWF), High Quality Cold Water Fishery (HQ-CWF), etc.) Please refer to item C. Chapter 93 Stream Classifications in the Appendix. It is also recommended that you check for classification updates in PA DEP's Existing Use Designations for PA Water Bodies list (found here: <http://files.dep.state.pa.us/Water/Drinking%20Water%20and%20Facility%20Regulation/WaterQualityPortalFiles/Existing%20Use/EU%20table%20list.pdf>). Approximate Distance to Nearest Watercourse: _____ feet

Note: Earth disturbance or an obstruction or encroachment within 50 feet of a stream or other water of the Commonwealth may require additional permits or approvals by other agencies.

Types, Slopes, & Locations of Soil: A soils map and soil characteristic information should be included with this guide. It is recommended that the map and related information be created and printed using the USDA Web Soil Survey: <http://websoilsurvey.nrcs.usda.gov/>. Are hydric soils or soils which may have hydric inclusions present on your site (see below)?

Hydric Soils	Soils with possible Hydric Inclusions	
Holly - HW	Barbour - Ba	
Norwich & NcA, NcB, NsB Chippewa -	Basher - Bc	
Peat - Pt	Mardin: McB2 McC2 McD2 MfB2 MfC2	MfD2 MgB MgD MgF Chippewa
Wyalusing - Wy	Mixed Alluvial – Mn (Holly & Wyalusing)	
	Morris: MoA MoB2 MoC2 MrB2 MrC2	MrD2 MsB MsD Norwich
	Terrace – Tc (seep spots)	
	Unidilla - Us	
	Volusia: VcA VcB2 VcC2 VcD2 VfB	VfC VfD VsB VsD Chippewa
	Wellsboro: WeB2 WeC2 WeD2 WIB2 WIC2	WID2 WsB WsD WsF Norwich

_____ Yes _____ No Susquehanna County Soils that are Hydric and/or have Hydric Inclusions:

Note: The presence of hydric soils may indicate that you have regulated wetlands on your property. The PA DEP Factsheet titled CLUES TO WETLAND IDENTIFICATION: QUESTIONS FOR DEVELOPERS, CONTRACTORS, SURVEYORS, FARMERS AND LAND OWNERS (included at the end of this guide) will help in identifying if wetlands are available on your site. It is recommended that earth disturbance and construction activities be planned well away from possible wetlands. Impacts to wetlands will likely require additional permits or Rev. 9/20176 approvals by other agencies.

A wetland delineation by an environmental consultant is recommended if hydric soils are present and project activities are planned in or near possible wetlands.

C. Site Drainage & Runoff:

Prior to the start of the project, does offsite or upslope drainage exist? _____
(E.g. existing pipes, drainage swales, etc. that discharge to or flow on/through the property)

Will runoff from above the project site present problems or need to be controlled during construction?
____ Yes ____ No

Will the completion of your project increase storm water runoff volume or channelize stormwater runoff?
____ Yes ____ No

Note: If you indicated “yes” to Questions C or D above, this runoff must be addressed in your E&SPC Plan.

E&SPC PLAN NARRATIVE

Please complete all sections.

1. GENERAL INFORMATION

A. Project Owner _____

Owner's Address _____

Owner's Phone _____

B. Project Name _____

Project Address _____

Municipality _____

Has the municipality been contacted concerning this project? ____ Yes ____ No

(Please check with your local municipality regarding stormwater management, land development, and zoning requirements.)

Total Site Area _____ (Acres Square Feet)

Total Area to be Disturbed _____ (Acres Square Feet)

Description of Project _____

Estimated dates for start-up and completion: Start: _____ End: _____

Present site conditions (i.e. type of land use): _____

C. Person(s) responsible for construction and maintenance of erosion and sediment pollution controls during earth disturbance activities:

Name _____

Address _____

Phone _____

D. For new home construction within a larger development, you should locate a copy of the approved Erosion and Sediment Pollution Control Plan for that subdivision.

Name of Development _____

Best Management Practices (BMPs):

Check if applicable:

- rock construction entrance
- straw bale barrier
- filter fabric (silt) fence
- silt fence reinforced by staked strawbale
- compost filter berm

- rock filters
- waterbar
- sediment filter log (straw waddle)
- temporary swale w/rip-rap apron
- permanent diversion channel w/rip-rap apron
- temporary seeding/mulching
- permanent seeding/mulching

- compost filter sock
- wood chip filter berm

List other alternative BMPs:

Describe any temporary E&S Control BMPs you will be using on your site (such as silt fence, rock filters, temporary seeding, etc.).

Note: A copy of this Small Project Plan should be kept on site during the construction activity and your contractor should have a copy of this Small Project Plan available at all times. The Susquehanna County Conservation District will also keep a copy of your Small Project Plan on record in our office.

Post Construction Stormwater Management (PCSM)

Plans: Do They Apply To A Small Project?

According to the most recent Chapter 102 regulation changes which were (proposals set forth by PA DEP on August 21, 2010) enacted on November 19, 2010, the following conditions apply to a Small Project:

- The revision provides that for minor projects when there is little or no change in the runoff characteristics from the site, the PCSM Plan can be brief, can be only a sentence or two, and still meet requirements of Subsection 102.8a.

Essentially, the District's interpretation of this change is that it will be left up to the individual municipality to decide how they will apply this PCSM regulation (per the Small Project E&S Control Plan). The District (in making this determination) is not attempting to skirt the issue of the PCSM Plan regulation, but rather, requesting municipal guidance since it will be determined by the municipality how to provide for these changes in their individual Subdivision and Land Development Ordinance codes which may also involve the inspection of the PCSM Plan BMP installation.

Please refer to Appendices A and B (on pgs. 25 and 26) for suggested PCSM Plan BMPs.

Please refer to Appendices C and D (on pgs. 27 and 28) for sample "Plot Plan" drawings.

STANDARD E&SPC PLAN NOTES FOR SMALL PREOJECTS

(Please attach to your plan submittal.)

1. Stockpile heights must not exceed 35 feet Stockpile slopes must be 2: 1 or flatter.
2. The operator shall assure that the approved erosion and sediment control plan is properly and completely implemented.
3. Until the site is stabilization, all erosion and sediment BMPs shall be maintained properly. Maintenance shall include inspections of all erosion and sediment BMPs after each runoff event and on a weekly basis. All preventative and remedial maintenance work, including clean out, repair, replacement, regrading, and reseeded, remulching and resetting must be performed immediately.
4. Immediately upon discovering unforeseen circumstances posing the potential for accelerated erosion and/or sediment pollution, the operator shall implement appropriate best management practices to minimize the potential for erosion and sediment pollution and notify the local conservation district and/or the regional office of the Department.
5. The reviewing agency shall be notified of any changes to the approved plan prior to implementation of those changes. The reviewing agency may require a written submittal of those changes for review and approval at its discretion.
6. All off-site waste and borrow areas must have an E&S plan approved by the local conservation district or the Department fully implemented prior to being activated.
7. All pumping of water from any work area shall be done through a pumped water filter bag over non-disturbed areas.
8. A copy of the approved erosion and sediment control plan must be available on site at all times during construction.
9. E&S BMPs shall remain functional as such until all areas tributary to them are permanently stabilized or until they are replaced by another BMP approved by the local conservation district or the Department.
10. After final site stabilization has been achieved, temporary erosion and sediment BMPs must be removed or converted to permanent post construction stormwater management BMPs. Areas disturbed during removal or conversion of the BMPs shall be stabilized immediately.

11. At least 7 days prior to starting any earth disturbance activities, including clearing and grubbing, the owner and/or operator shall invite all contractors, the landowner, all appropriate municipal officials, the E&S plan preparer, the PCSM plan preparer, the licensed professional responsible for oversight of the critical stages of implementation of the PCSM plan, and a representative from the local conservation district to an on pre-construction meeting.

12. At least 3 days prior to starting any earth disturbance activities, or expanding into an area previously unmarked, the Pennsylvania One Call System Inc. shall be notified at 1-800-242-1776 for the location of existing underground utilities.

13. All earth disturbance activities shall proceed in accordance with the sequence provided on the plan drawing. Deviation from that sequence must be approved in writing from the local conservation district or by the Department prior to implementation.

14. Immediately after earth disturbance activities cease in any area or subarea of the project, the operator shall stabilize all disturbed areas. During non-germinating months, mulch or protective blanketing shall be applied as described in the plan. Areas not at finished grade, which will be reactivated within 1 year, may be stabilized in accordance with the temporary stabilization specifications. Those areas which will be reactivated within 1 year shall be stabilized in accordance with the permanent stabilization specifications.


15. Permanent stabilization is defined as a minimum uniform, perennial 70% vegetative cover or other permanent non- vegetative cover with a density sufficient to resist accelerated surface erosion. Cut and fill slopes shall be capable of resisting failure due to slumping, sliding, or other movements.

16. Hay or straw mulch must be applied at 3.0 tons per acre.

17. All sediment removed from BMPs shall be disposed of in a manner described on the plan drawings.

18. All building materials and wastes shall be removed from the site and recycled or disposed of in accordance with the Department's Solid Waste Management Regulations at 25 Pa. Code 260.1 et seq., 271.1 et seq., and 287.1 et seq. No building materials or wastes or unused building materials shall be burned, buried, dumped or discharged at the site.


Erosion and Sediment Control Plot Plan

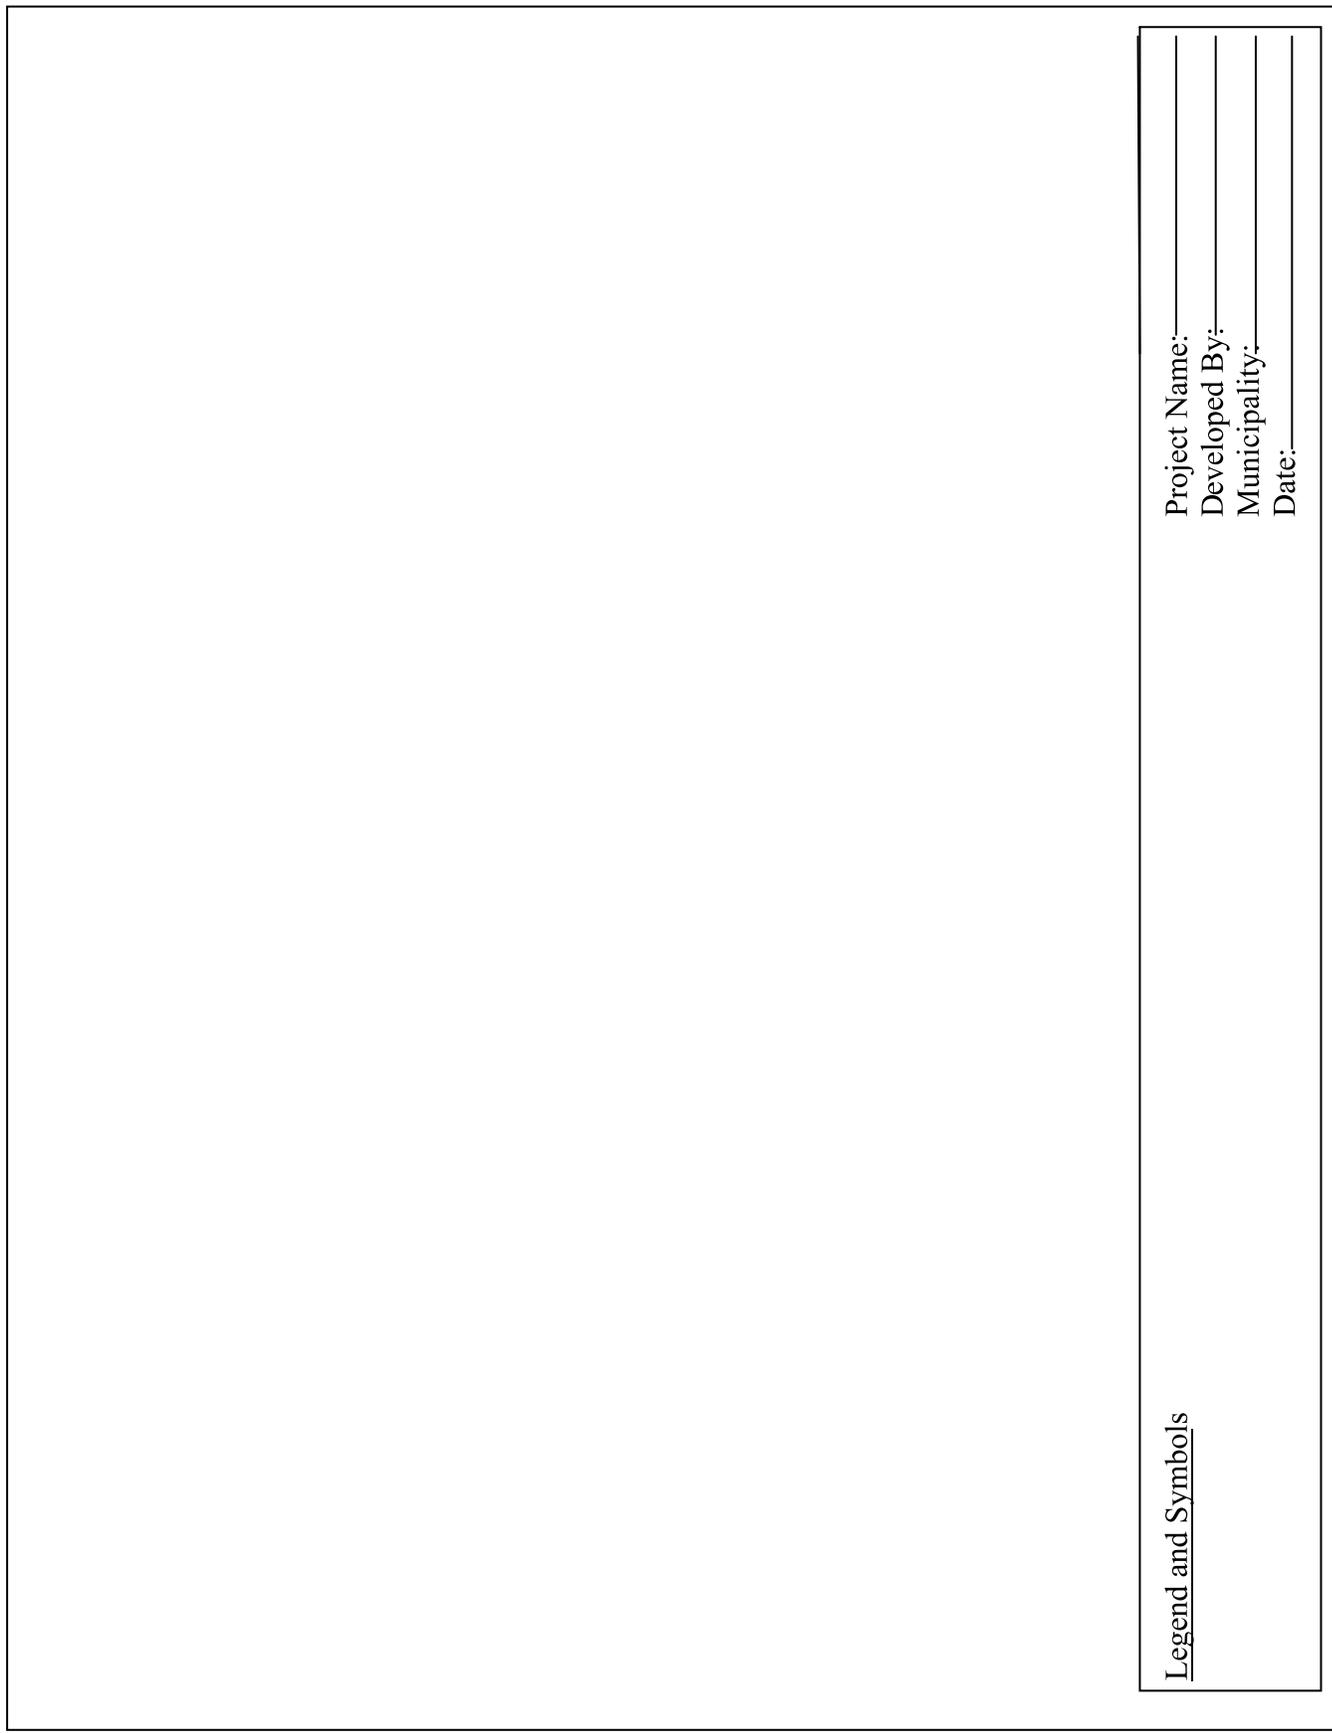


Legend and Symbols

Project Name: _____
Developed By: _____
Municipality: _____
Date: _____

APPENDIX "A"

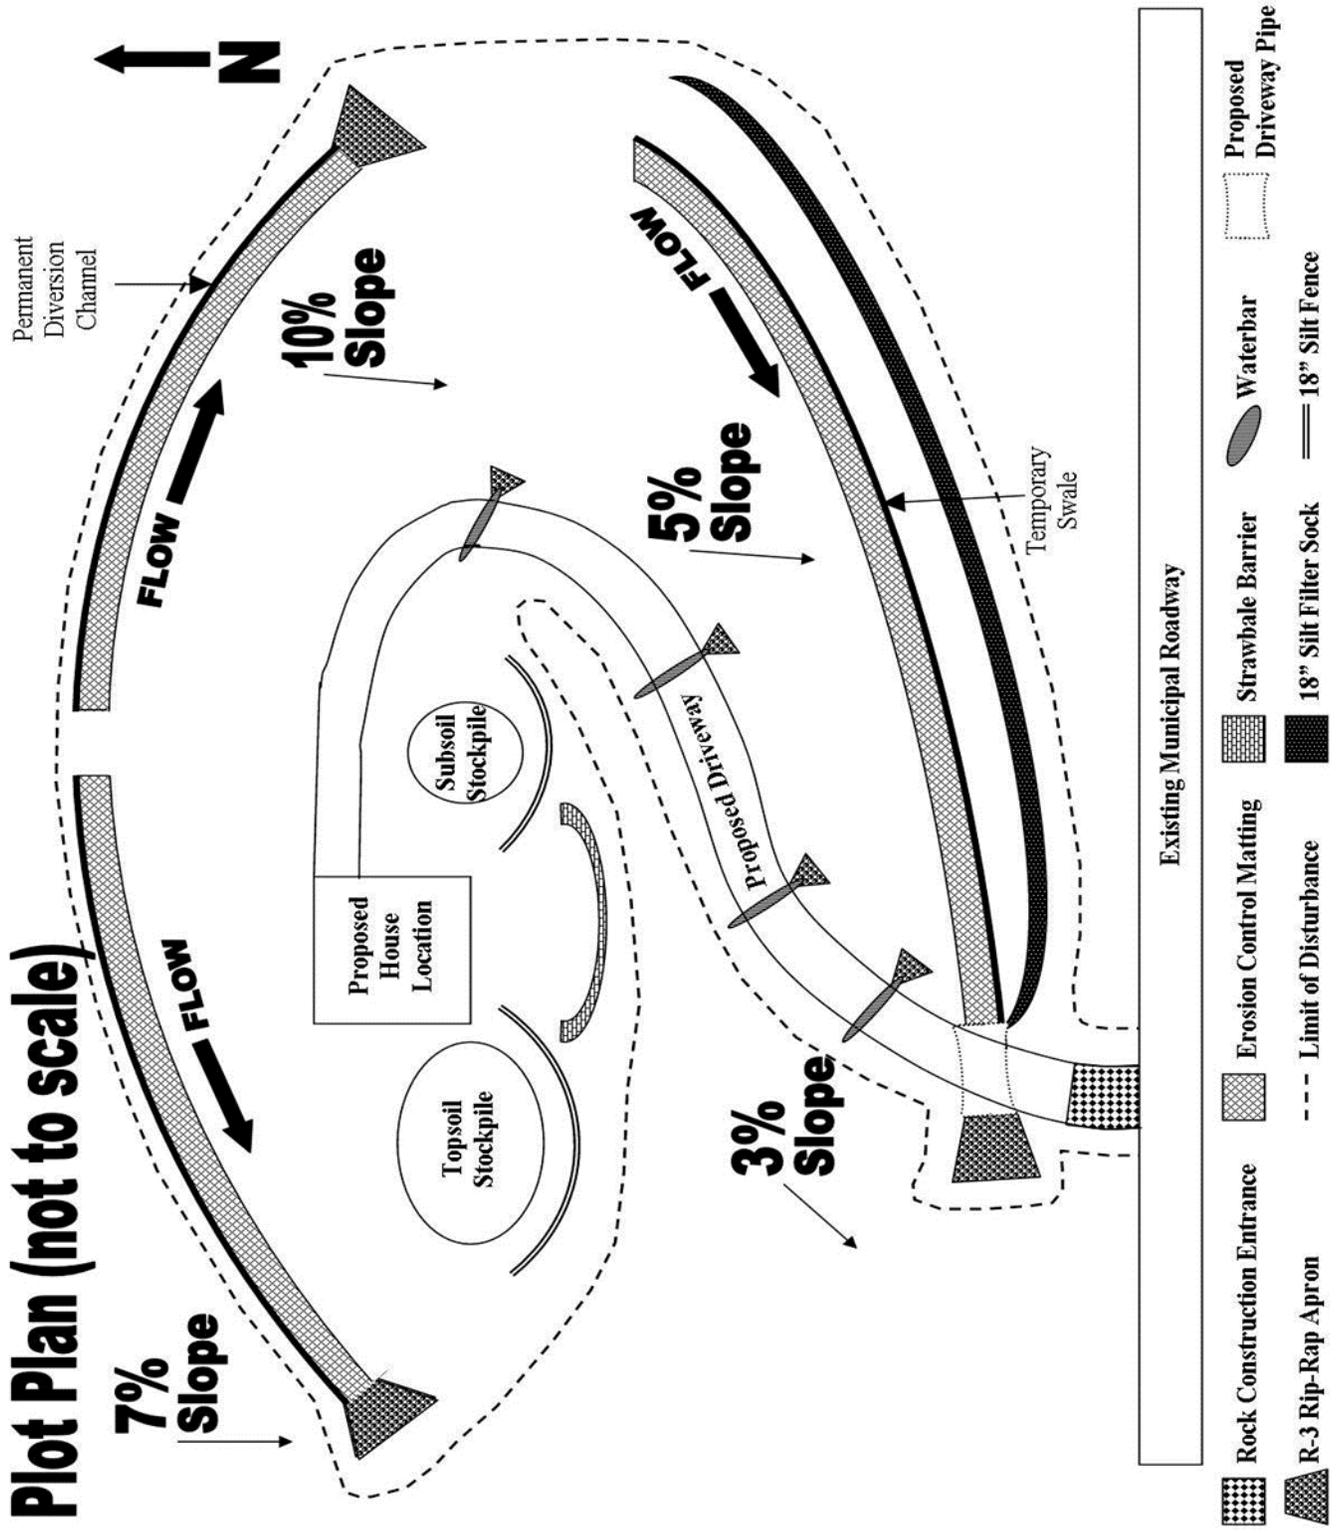

APPENDIX "B"

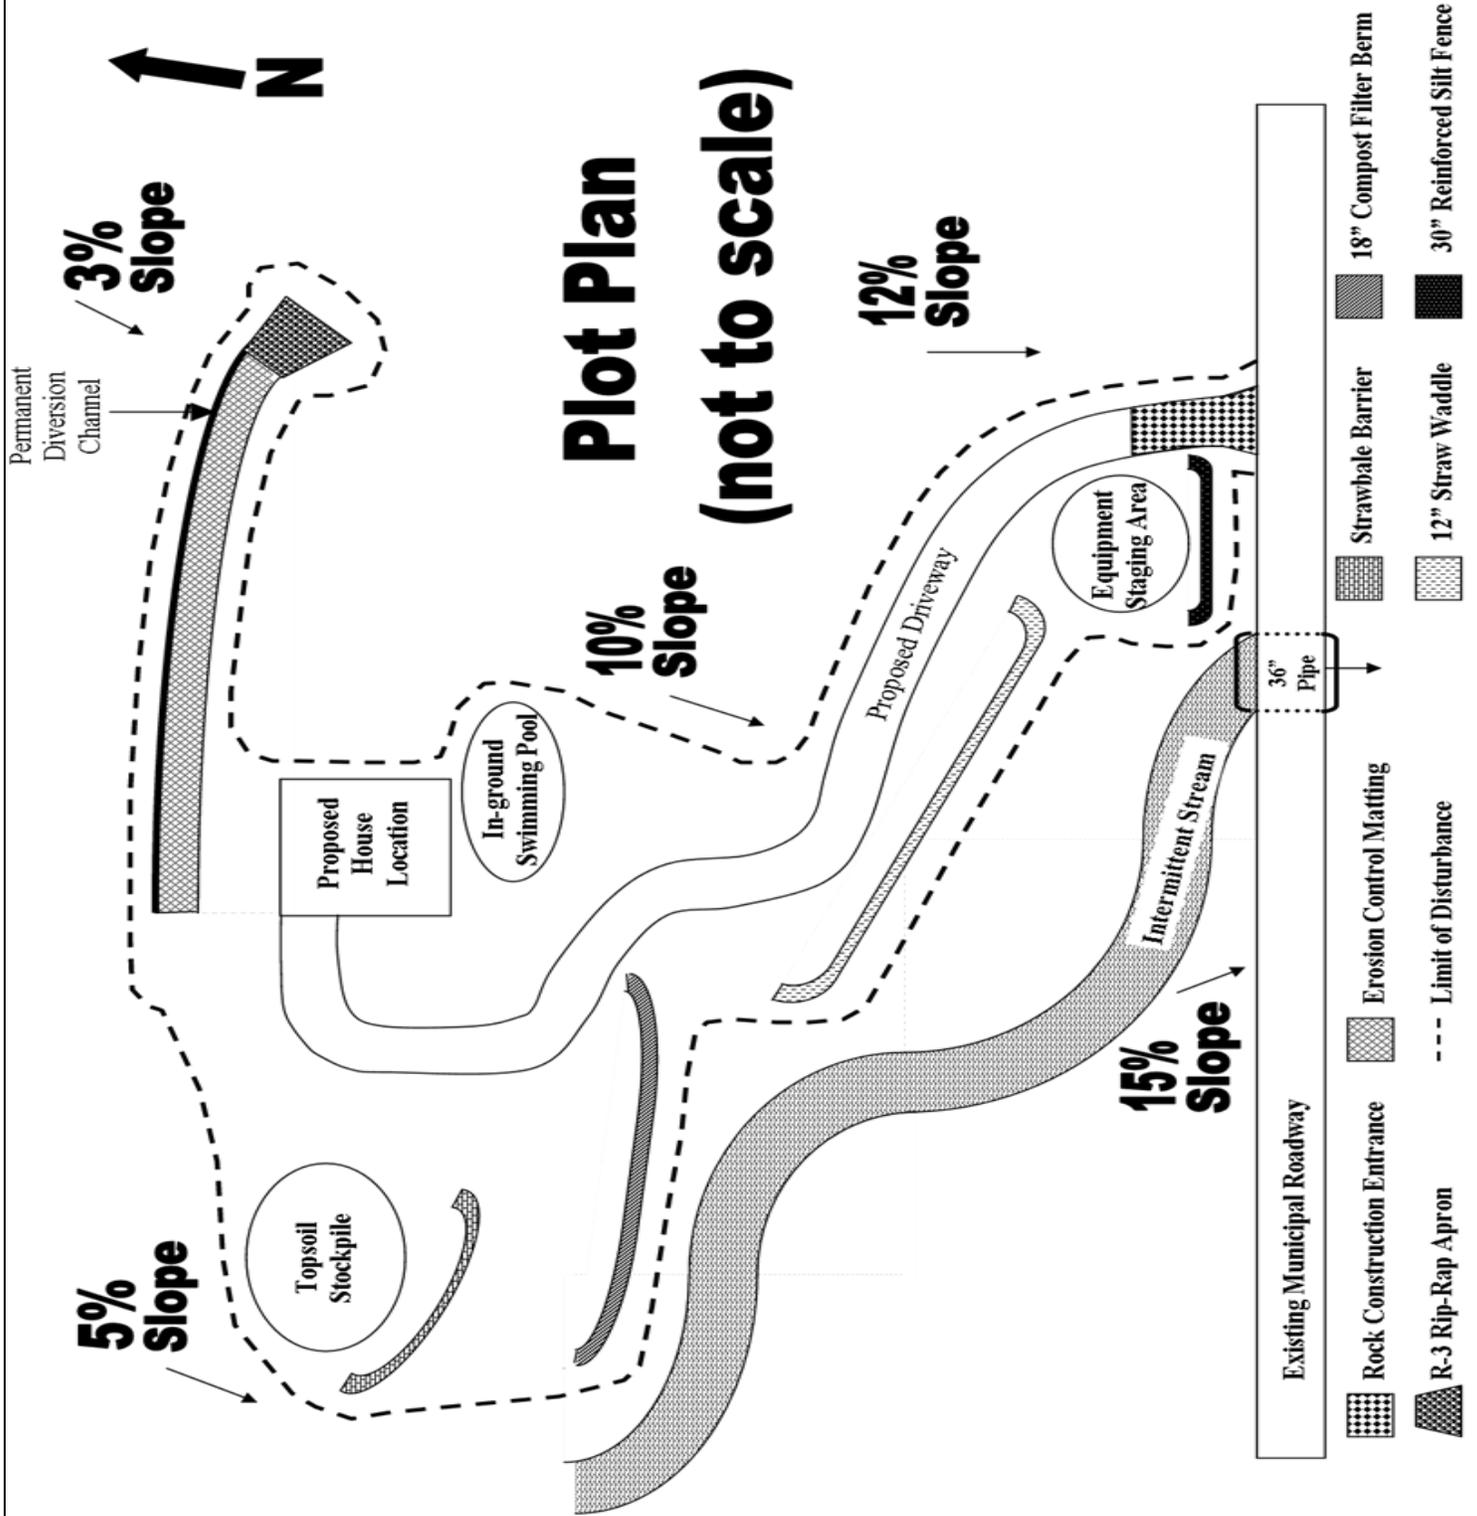

Disturbed Area Stabilization (Indicate below as appropriate.)

Prior to the completion of the project, state regulations require that the project site be permanently stabilized with a minimum uniform, perennial 70% vegetative cover or other permanent non-vegetative cover with a density sufficient to resist accelerated erosion. Descriptions of revegetation should include the seeding mixture to be used, top soil application, lime, fertilizer and mulch application rates. Cessation of activity for at least 4 days requires temporary stabilization.

(TEMPORARY) SPECIES: _____

% PURE LIVE SEED: _____

%APPLICATION RATE: _____

LB./ACRETYPE: _____ (X-X-X)

FERTILIZER APPL. RATE: _____ LB./ACRE

LIMING RATE: _____ T./ACRE

MULCH TYPE: _____

MULCHING RATE: _____ T./ACRE

(PERMANENT) SPECIES: _____

% PURE LIVE SEED: _____%

APPLICATION RATE: _____ LB./ACRE

FERTILIZER TYPE: _____ (X-X-X

)FERTILIZER APPL. RATE: _____ LB./ACRE

LIMING RATE: _____ T./ACRE

MULCH TYPE: _____

MULCHING RATE: _____ T./ACRE

ANCHOR MATERIAL: _____

ANCHORING METHOD: _____

RATE OF ANCHOR MATERIAL APPL.: _____ LB./ACRE

SEEDING SEASON DATES: _____

Table 11.1

Cubic yards of topsoil required for applications to various depths

Depth (in)	Per 1,000 Square Feet	Per Acre
1	3.1	134
2	6.2	268
3	9.3	403
4	12.4	537
5	15.5	672
6	18.6	806
7	21.7	940
8	24.8	1,074

Table 11.2

Soil amendment application rate equivalents

Permanent Seeding Application Rate				
Soil Amendment	Pre Acre	Per 1,000 Sq. Ft.	Per 1,000 Sq. Yd.	Notes
Agricultural lime	6 tons	240 lb.	2,480 lb.	Or as per soil test; may not be required in agricultural fields
10-10-20 fertilizer	1,000 lb.	25 lb.	210 lb.	Or as per soil test; may not be required in agricultural fields
Temporary Seeding Application Rate				
Agricultural lime	1 ton	40 lb.	410 lb.	Typically, not required for topsoil stockpiles
10-10-10 fertilizer	500 lb.	12.5 lb.	100 lb.	Typically, not required for topsoil stockpiles

Table 11.4

Recommended Seed Mixtures

Seeding Rate – Pure Live Seed			
Mixture Numbers	Species	Most Sites	Adverse sites
1²	Spring oats (spring), or	64	96
	Annual ryegrass (spring or fall), or	10	15
	Winter wheat (fall), or	90	120
	Winter rye (fall)	56	112
2³	Tall fescue, or	60	75
	Fine fescue, or	35	40
	Kentucky bluegrass, plus	25	30
	Redtop⁴, or	3	3
	Perennial ryegrass	15	20
3	Birdsfoot trefoil, plus	6	10
	Tall fescue	30	35
4	Birdsfoot trefoil, plus	6	10
	Reed canarygrass	10	15
5⁸	Crownvetch, plus	10	15
	Tall fescue, or	20	25
	Perennial ryegrass	20	25
6^{5,8}	Crownvetch, plus	10	15
	Annual ryegrass	20	25
7⁸	Birdsfoot trefoil, plus	6	10
	Crownvetch, plus	10	15
	Tall fescue	20	30

Table 11.4 Con.

Recommended Seed Mixtures

8	Flatpea, plus	20	30
	Tall fescue, or	20	30
	Perennial ryegrass	20	25
9⁶	Serecia lespedeza, plus	10	20
	Tall fescue, plus	20	25
	Redtop ⁴	3	3
10	Tall fescue, plus	40	60
	Fine fescue	10	15
11	Deertongue, plus	15	20
	Birdsfoot trefoil	6	10
12⁷	Switchgrass, or	15	20
	Big Bluestem, plus	15	20
	Birdsfoot trefoil	6	10
13	Orchardgrass, or	20	30
	Smooth bromegrass, plus	25	35
	Birdsfoot trefoil	6	10

Penn State, “Erosion Control and Conservation Plantings on Noncropland”

1. PLS is the product of the percentage of pure seed times percentage germination divided by 100. For example, to secure the actual planting rate for switchgrass, divide 12 PLS by 0.35 to obtain 34.2 pounds of seed required to plant one acre. All mixtures in this are shown in terms of PLS.
2. If high quality seed is used, for most sites seed spring oats at a rate 2 bushels per acre, winter wheat at 11.5 bushels per acre, and winter rye at 1 bushel per acre. If germination is below 90%, increases these suggested seeding rates by 0.5 bushel per acre.
3. This mixture is suitable for frequent mowing. Do not cut shorter than 4 inches.
4. Keep seeding rate to that recommended in table. These species have many seeds per pound and are very competitive. To seed small quantities of small seeds such as weeping lovegrass and redtop, dilute with dry sawdust, sand, rice hulls, buckwheat hulls, etc.

Figure 11.4


Straw Mulch Applied at 3 Tons/Acre



Rule of thumb: If you are seeing a lot of bare ground, there is not enough straw.

STANDARD CONSTRUCTION DETAIL # 3-1

Rock Construction Entrance

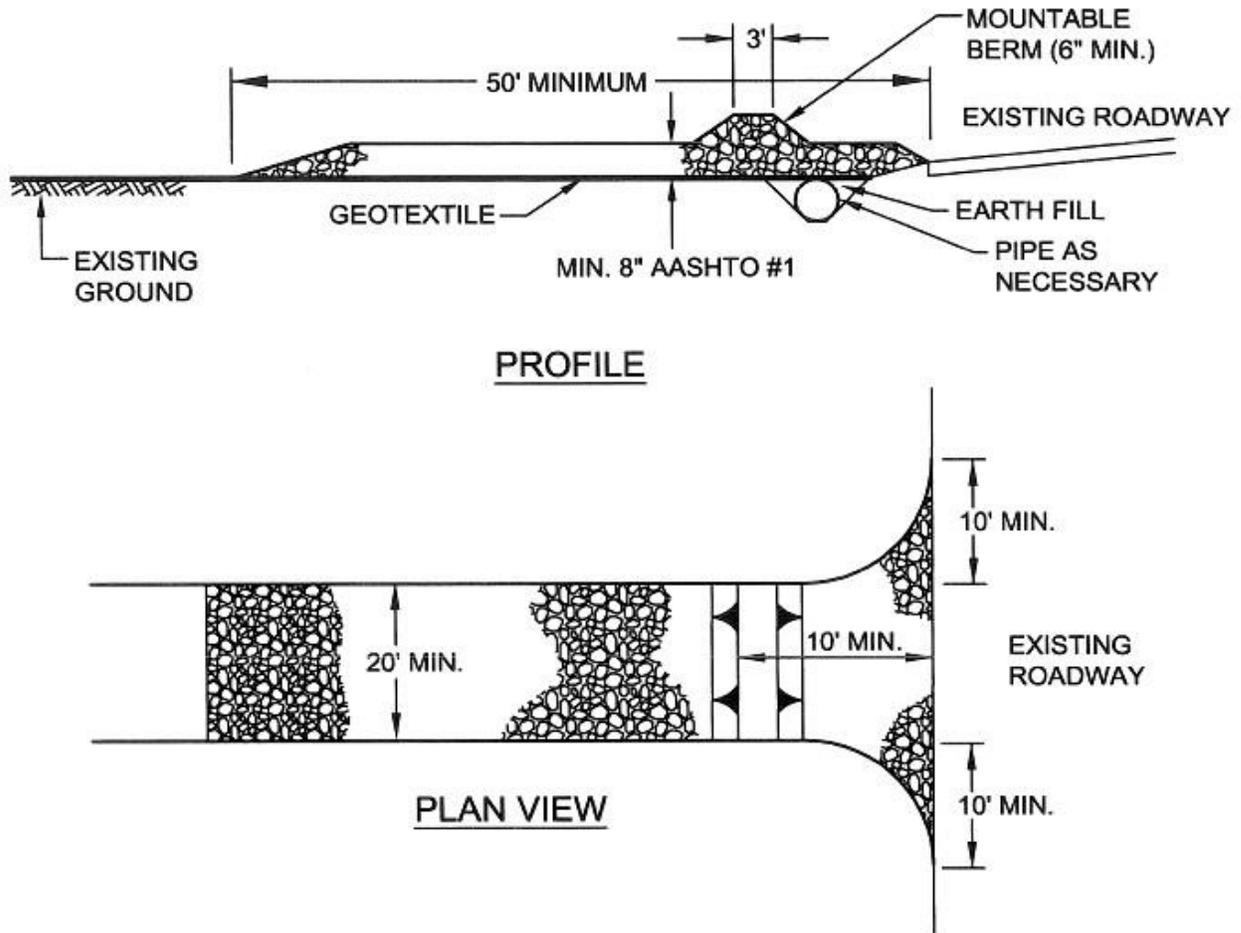

Topsoil should be removed prior to installation of Rock Construction Entrance.

Extend rock over full width of entrance.

Runoff shall be diverted from roadway to a suitable sediment removal BMP prior to entering Rock Construction Entrance.

Mountable berm should be installed wherever optional culvert pipe is used. Pipe to be sized appropriately for size of ditch being crossed.

MAINTENANCE: Rock Construction Entrance thickness shall be constantly maintained to the specified dimensions by adding rock. A stockpile shall be maintained on site for this purpose. All sediment deposited on paved roadways shall be removed and returned to the construction site immediately. If excessive amounts of sediment are being deposited on roadway, extend length of Rock Construction Entrance by 50 feet increments until condition is alleviated or install wash rack. Washing the roadway or sweeping the deposits into roadway ditches, sewer, culverts, or other drainageways is not acceptable.



STRAW BALE BARRIER

Straw Bale Barriers may be used to control runoff from small disturbed areas provided that runoff is in the form of sheet flow. Since straw bales tend to deteriorate within a 3-month period, they should be considered as short-term control measures.

Straw Bale Barriers should not be used in areas of concentrated flows (e.g. channels, swales, erosion gullies, across pipe outfalls, as inlet protection, etc.) or in areas where they cannot be properly staked (e.g.

paved areas).

The maximum slope length above any Straw Bale Barrier should not exceed that shown in Table 4.4 (on pg. 9). The slope length shown is the distance from the barrier to the drainage divide or the nearest upslope channel. NOTE: Slope length is not increased by use of multiple rows of barriers!

TABLE 4.4

Maximum Slope Length for Straw Bale Barriers and Wood Chip Filter Berms

Slope - Percent	Maximum Slope Length (ft) Above Barrier
2 (or less)	150
5	100
10	50
15	35
20	25
25	20
30	15
35	15
40	15
45	10
50	10
>50	Not Permitted

Straw Bale Barriers should not be used in areas where rock prevents full and uniform anchoring of the bales.


Straw Bale Barriers should be installed according to Standard Construction Detail # 4-13 (on pg. 10).

Bales should be placed on edge and installed in an anchoring trench. When improperly placed and installed (such as staking the bales directly to the ground with no soil seal or entrenchment), undercutting and other failures typically occur.

Two support stakes should be driven through each bale to the depth 18" below the ground surface.

The excavated soil should be backfilled and compacted on the upslope side of the bales.

STANDARD CONSTRUCTION DETAIL # 4-13

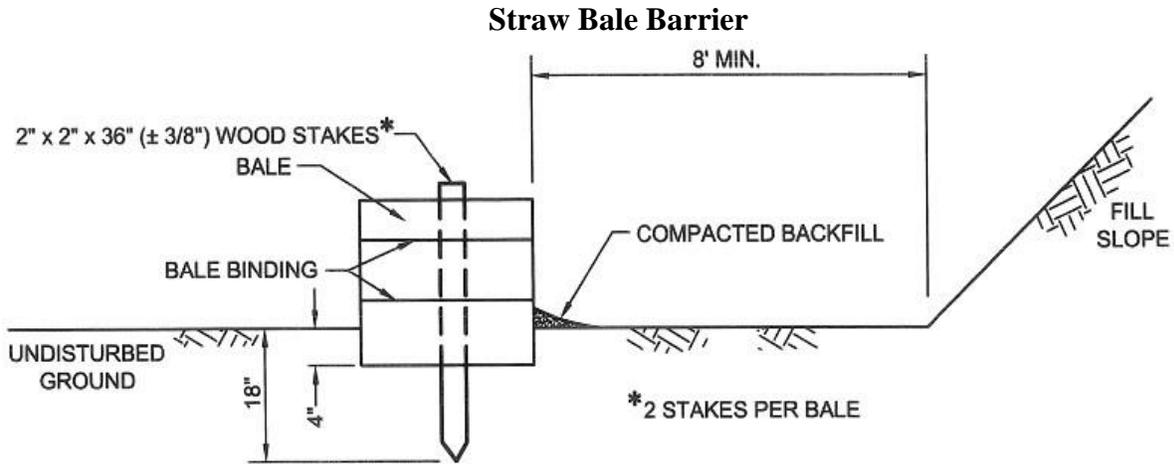

Straw Bale Barriers shall not be used for projects extending more than 3 months.


Straw Bale Barriers shall be placed at existing level grade with ends tightly abutting the adjacent bales. First stake of each bale shall be angled toward adjacent bale to draw bales together. Stakes shall be driven flush with the top of the bale (see Figure 4.4 on pg. 9). Both ends of the barrier shall be extended at least 8 feet up slope at 45 degrees to the main barrier alignment (see Figure 4.1 on pg. 13).

Compacted backfill to extend approximately 4 inches above ground level.

Sediment shall be removed when accumulations reach 1/3 the above ground height of the barrier. Damaged or deteriorated bales shall be replaced immediately upon inspection.

Any section of Straw Bale Barrier which has been undermined or topped shall be immediately replaced with a Rock Filter Outlet. See Standard Construction Detail # 4-6 (on pg. 11). Bales shall be removed when the tributary area has been permanently stabilized.

**Figure 4.4
Straw Bale Barrier Installation**

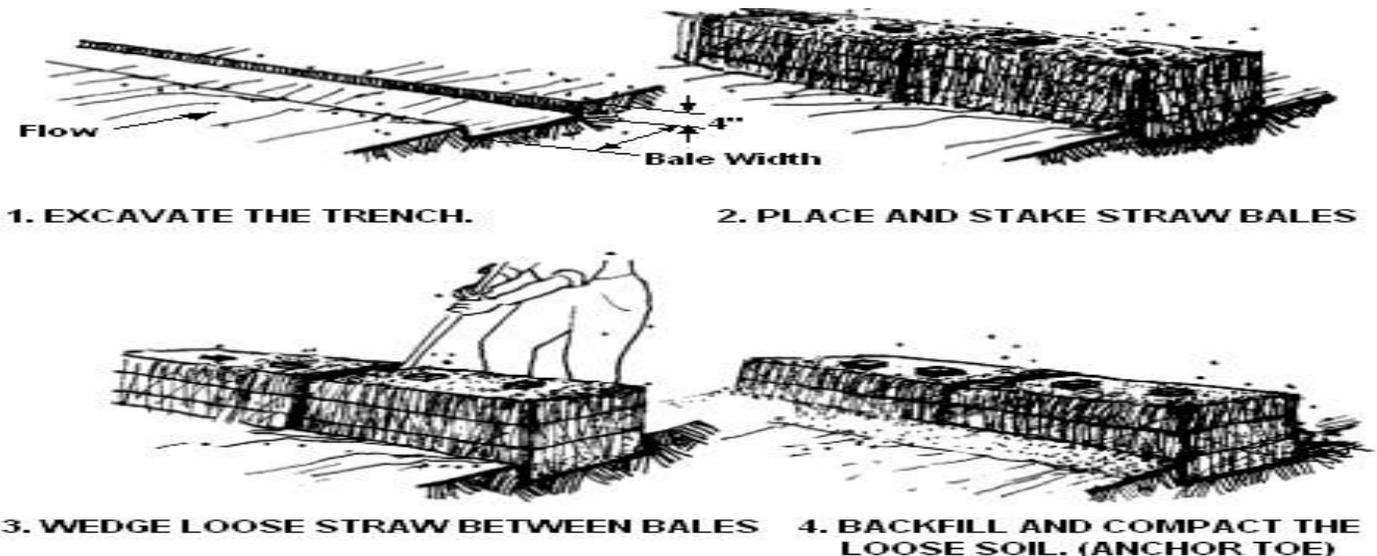




ROCK FILTER OUTLET


Rock Filter Outlets may be used to address problems of concentrated flows to sediment barriers. Wherever a sediment barrier has failed due to an unanticipated concentrated flow, a Rock Filter Outlet should be installed unless that concentrated flow can be otherwise directed away from the barrier.

In special protection watersheds (HQ or EV), or where additional water filtering is desired, a 6" layer of compost should be added and anchored on top of the AASHTO #57 stone. A 6-inch deep sump may be installed immediately upslope of the Rock Filter Outlet to provide additional sediment removal capacity.

STANDARD CONSTRUCTION DETAIL # 4-6 Rock Filter Outlet

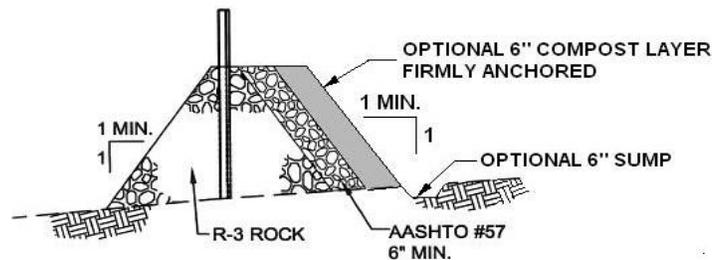

OUTLET CROSS-SECTION

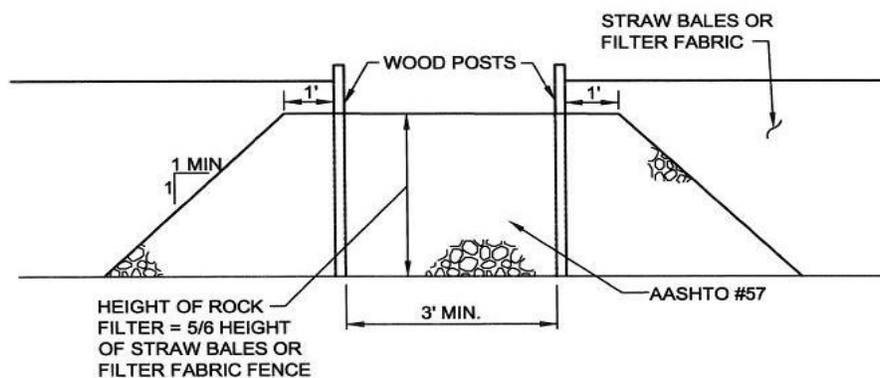



UP-SLOPE FACE

A Rock Filter Outlet shall be installed where failure of a Straw Bale Barrier or Filter Fabric Fence has occurred due to concentrated flow.

Sediment must be removed when accumulations reach 1/3 the height of the outlet.

STANDARD CONSTRUCTION DETAIL 4-1

Compost Filter Sock

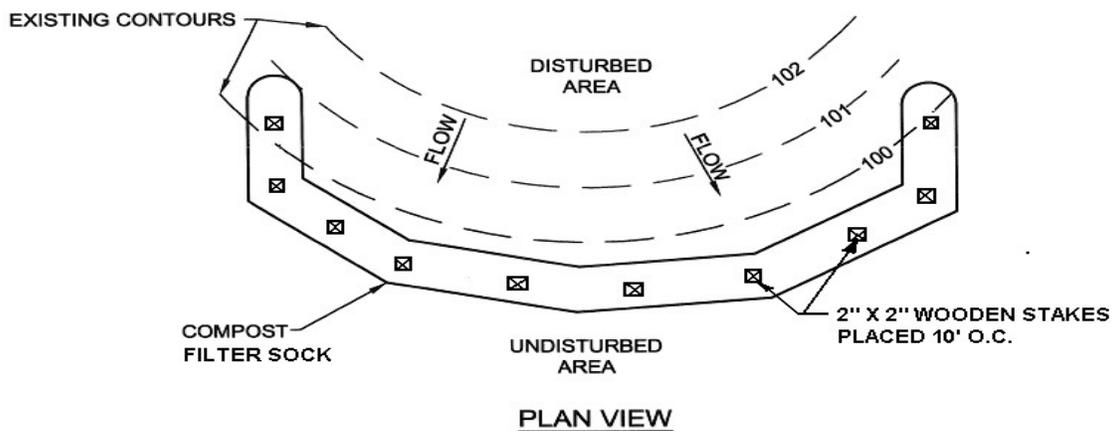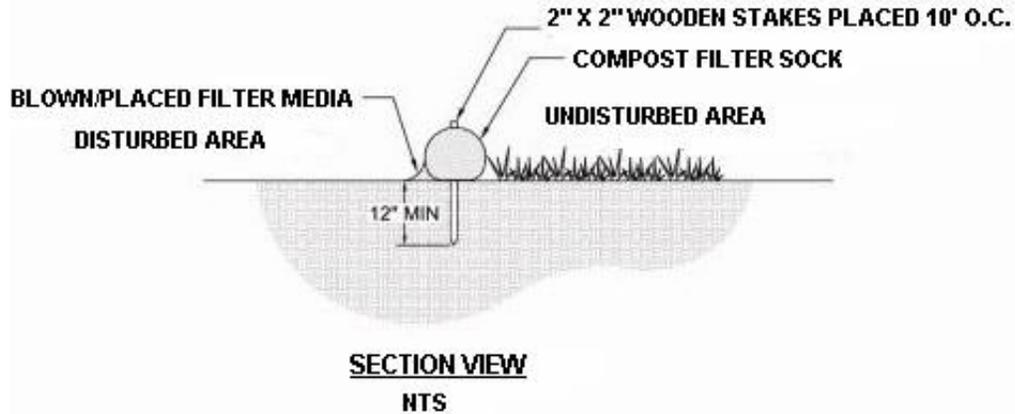

A Compost Filter Sock is a mesh tube filled with composted material that is placed below a disturbed area, perpendicular to sheet flow, to filter sediment-laden runoff before it leaves the site.

A Compost Filter Sock shall be placed at existing level grade. Both ends of the sock shall be extended at least 8 feet up slope at 45 degrees to the main sock alignment (see Figure 4.1 on pg. 13).

Traffic shall not be permitted to cross Compost Filter Socks.

Accumulated Sediment shall be removed when it reaches $\frac{1}{2}$ the above ground height of the sock and disposed in the manner described elsewhere in the plan.

Socks shall be inspected weekly and after each runoff event. Damaged socks shall be repaired according to manufacturer's specifications or replaced within 24 hours of inspection.

Biodegradable Compost Filter Socks shall be replaced after 6 months; photodegradable Compost Filter Socks after 1 year.

Polypropylene Compost Filter Socks shall be replaced according to manufacturer's recommendations.

Upon stabilization of the area tributary to the sock, stakes shall be removed. The sock may be left in place and vegetated or removed. In the latter case, the mesh shall be cut open and the mulch spread as a soil supplement



FILTER FABRIC FENCE (SILT FENCE)

Silt Fence may be used to control runoff from small disturbed areas when it is in the form of sheet flow, and the discharge is to a stable area. Only those fabric types specified for such use by the manufacturer should be used. Standard Filter Fabric width shall be 30" min.; Reinforced Filter Fabric width shall be 42" min.

Do not use silt fence in areas of concentrated flows (e.g. channels, swales, erosion gullies, across pipe outfalls, as inlet protection, etc.).

Silt Fence should not be used in areas where rock or rocky soils prevent the full and uniform anchoring of the fence. Forested areas are not recommended unless tree roots can be severed during excavation of the anchor trench.


Silt Fence should not be installed on uncompacted fills or in extremely loose soils (e.g. sandy loam), since this will likely result in undermining of the fence.

A 6" deep trench should be excavated, minimizing the disturbance on the downslope side. The bottom of the trench should be at level grade. NOTE: Standard Silt Fence may be installed using the slicing method provided manufacturer's recommendations are followed.

A 2" X 2" (+/- 3/8", minimum cross-sectional area of 3.0 square inches) hardwood or equivalent steel (U or T weighing not less than 1.33 pound per linear foot) support stake should be driven 18" below the existing ground surface at 8-foot (max.) intervals (see Standard Construction Detail # 4-7 on pg. 12).

STANDARD CONSTRUCTION DETAIL # 4-7 Standard Silt Fence (18" High)

*STAKES SPACED @ 8' MAX.
USE 2" x 2" (± 3/8") WOOD
OR EQUIVALENT STEEL
(U OR T) STAKES

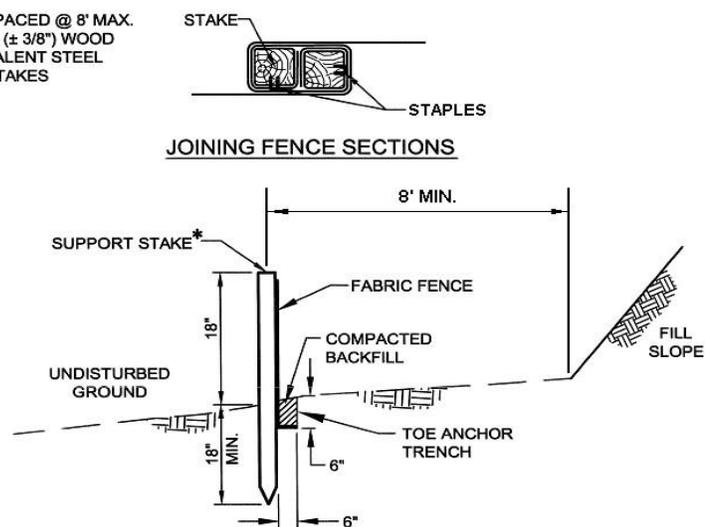


Fabric shall be 30" minimum.

Silt Fence must be placed at level existing grade. Both ends of the barrier must be extended at least 8 feet up slope at 45 degrees to the main barrier alignment to allow for pooling of water. (see Figure 4.1 on pg. 13).


Sediment must be removed when accumulations reach 1/2 the above ground height of the fence. Any section of Silt Fence which has been undermined or topped must be immediately replaced with a Rock Filter Outlet. See Standard Construction Detail # 4-6 (on pg. 11).

Fence shall be removed and properly disposed of when tributary area is permanently stabilized.

FIGURE 4.1
Sediment Barrier Alignment

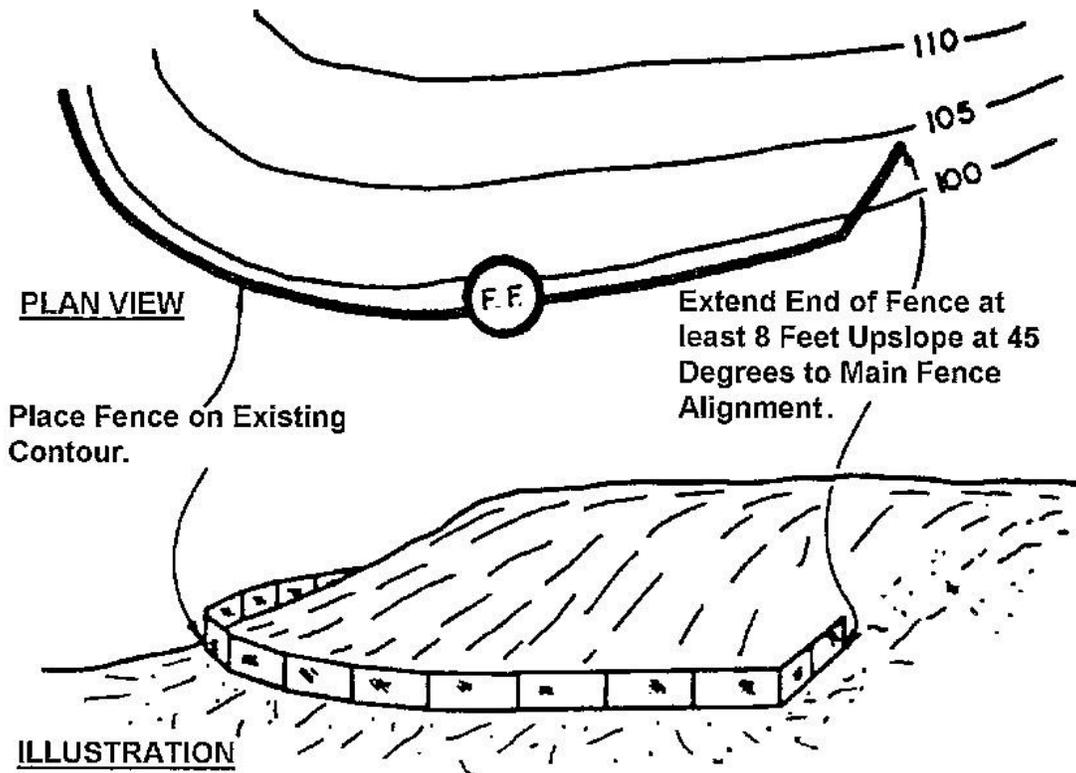

STANDARD CONSTRUCTION DETAIL # 4-8

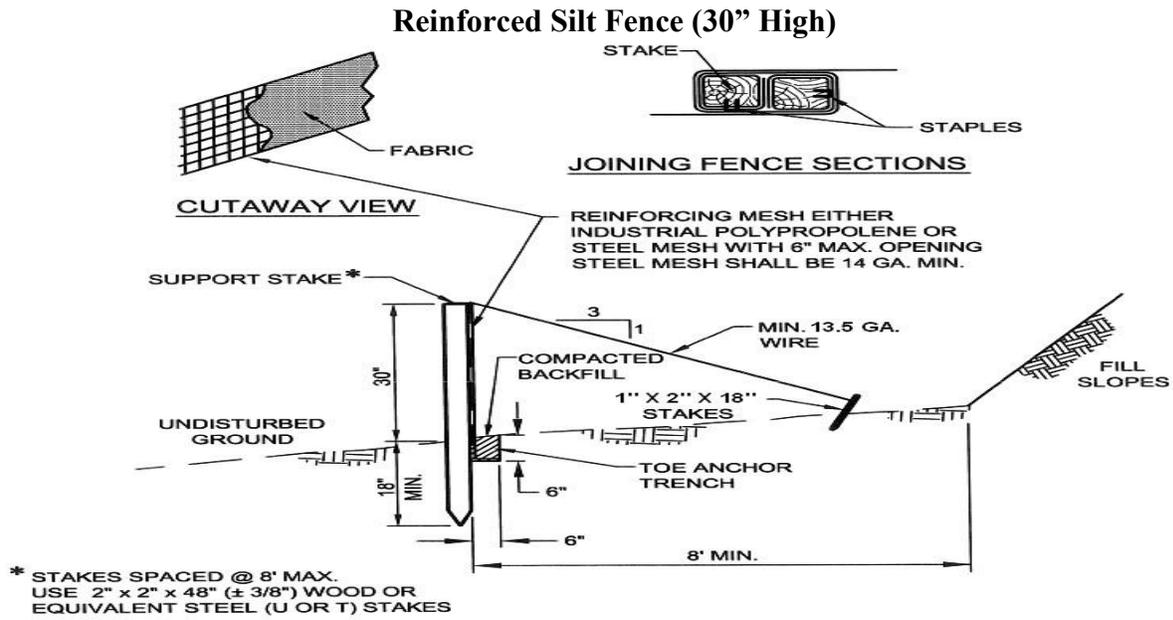

Fabric shall be 42" minimum.


Silt Fence must be installed at existing level grade. Both ends of each fence section must be extended at least 8 feet upslope at 45 degrees to the main fence alignment (see Figure 4.1 on pg. 13).

Sediment must be removed where accumulations reach 1/2 the above ground height of the fence.

Any section of Silt Fence which has been undermined or topped must be immediately replaced with a Rock Filter Outlet. See Standard Construction Detail # 4-6 (on pg. 11).

Fence shall be removed and properly disposed of when tributary area is permanently stabilized.

STANDARD CONSTRUCTION DETAIL # 4-9 Silt Fence Reinforced by Staked Straw Bales

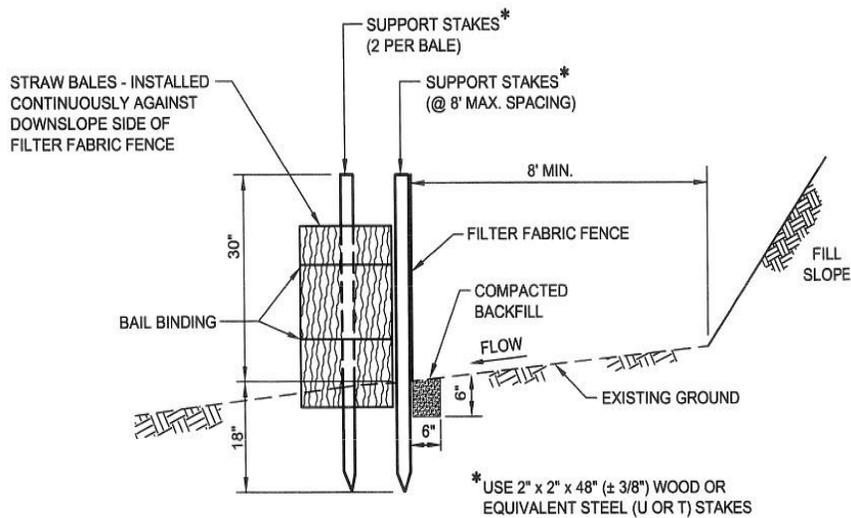

Not suitable for projects lasting longer than 3 months unless bales are replaced quarterly.

Fabric shall be 42" minimum.

Silt Fence must be installed at existing level grade. Both ends of each fence section must be extended at least 8 feet upslope at 45 degrees to the main fence alignment (see Figure 4.1 on pg. 13).

Sediment must be removed where accumulations reach 1/2 the above ground height of the fence. Any fence section which has been undermined or topped must be immediately replaced with a Rock Filter Outlet. See Standard Construction Detail # 4-6 (on pg. 11).

Fence shall be removed and properly disposed of when tributary area is permanently stabilized.

The filter fabric should be stretched and fastened to the upslope side of the support stakes. Wherever Reinforced Silt Fence is installed, the reinforcement mesh should be fastened to the stakes prior to the fabric (see Standard Construction Detail # 4-8 on pg. 14).

At fabric ends, both ends should be wrapped around the support stake and stapled. If the fabric comes already attached to the stakes, the end stakes should be held together while the fabric is wrapped around the stakes at least one revolution (360 degrees) prior to driving the stakes.

The bottom of the fence should be anchored by placing the fabric in the bottom of the trench, then backfilling and compacting the fill material in the trench. An acceptable alternative is the use of a machine which slices the soil to a depth of at least 6 inches and inserts the fabric in a continuous operation.

Guy wires should be attached to the support stakes of Reinforced Fabric Fence (see Standard Construction Detail #

4-8 on pg. 14). An acceptable alternative to the guy wires is to stake a continuous row of straw bales on the downslope side of the fence (see Standard Construction Detail # 4-9 on pg. 14). Filter Fabric Fence alignment should be at least 8' from the toe of fill slopes.

The maximum slope length (in both existing and final grade) above Standard (18") and Reinforced (30") Filter Fabric Fence should not exceed that shown in Table 4.3 (on pg. 15). The slope length shown is the distance from the fence to the drainage divide or the nearest upslope channel. NOTE: Slope length is not addressed by use of multiple rows of Filter Fabric Fence!

TABLE 4.3
Maximum Slope Length for Filter Fabric Fence

Slope – Percent	Maximum Slope Length (ft) Above Fence		
	Standard (18" High) Silt Fence	Reinforced (30" High) Silt Fence	Super Silt Fence
2 (or less)	150	500	N/A
5	100	250	N/A
10	50	150	N/A
15	35	100	N/A
20	25	70	N/A
25	20	55	N/A
30	15	45	N/A
35	15	40	N/A
40	15	35	N/A
45	10	30	N/A
50	10	25	N/A





COMPOST FILTER BERM

Although compost is typically viewed as a means of stabilization, it may also be used to construct a filter berm for sediment control. A Compost Filter Berm is a sediment filter consisting of composted material blown into a berm configuration below a disturbed area for the purpose of filtering the sediment-laden runoff before exiting the site. Compost Filter Berms may be vegetated or unvegetated and are usually left in place to provide long-term filtration of

stormwater as a post-construction BMP.

STANDARD CONSTRUCTION DETAIL #4-2 Compost Filter Berm

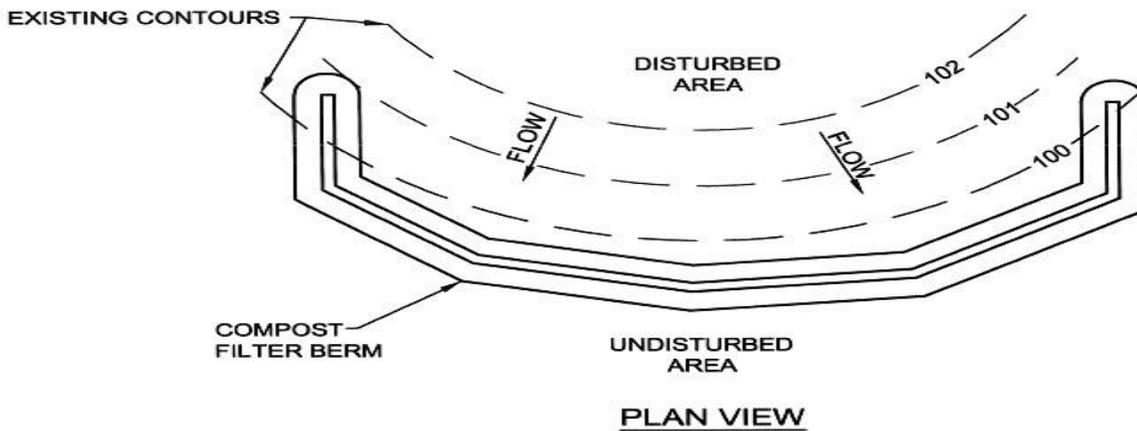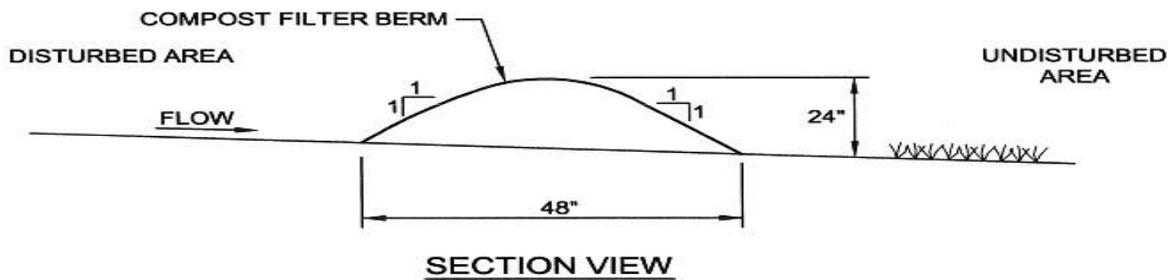

Compost Filter Berms shall be placed at existing level grade. Both ends of the berm shall be extended at least 8 feet up slope at 45 degrees to the main berm alignment (see Figure 4.1 on pg. 13).

The maximum slope length above a compost filter berm should be that shown in Table 4.3 (on pg. 15) for the Standard Silt Fence (18" high fence).

Tall grass shall be cut prior to installation to minimize potential for undercutting. Berm shall be netted or otherwise anchored after installation.

Sediment shall be removed when accumulations reach 1/3 the above ground height of the berm.

Any section Compost Filter Berm which has been undermined or topped shall be immediately replaced. Concentrated flows shall not be directed toward any Compost Filter Berm.

STANDARD CONSTRUCTION DETAIL 4-1 Compost Filter Sock

A Compost Filter Sock is a mesh tube filled with composted material that is placed below a disturbed area, perpendicular to sheet flow, to filter sediment-laden runoff before it leaves the site.

A Compost Filter Sock shall be placed at existing level grade. Both ends of the sock shall be extended at least 8 feet up slope at 45 degrees to the main sock alignment (see Figure 4.1 on pg. 13).

Traffic shall not be permitted to cross Compost Filter Socks.

Accumulated Sediment shall be removed when it reaches 1/2 the above ground height of the sock and disposed in the manner described elsewhere in the plan.

Socks shall be inspected weekly and after each runoff event. Damaged socks shall be repaired according to manufacturer's specifications or replaced within 24 hours of inspection.

Biodegradable Compost Filter Socks shall be replaced after 6 months; photodegradable Compost Filter Socks after 1 year.

Polypropylene Compost Filter Socks shall be replaced according to manufacturer's recommendations.

Upon stabilization of the area tributary to the sock, stakes shall be removed. The sock may be left in place and vegetated or removed. In the latter case, the mesh shall be cut open and the mulch spread as a soil supplement.



WOOD CHIP FILTER BERM

Wood Chip Filter Berms may be used on wooded or rocky slopes where staking and trenching of other BMPs is very difficult or impossible. Since they do not require trenching, Wood Chip Filter Berms disturb less soil during installation than Silt Fence and Straw Bale Barriers. However, large obstructions such as tree limbs, boulders, etc. should be removed prior to placement of the wood chips. Once the tributary drainage area is permanently stabilized, the Wood Chip Filter Berm may either be leveled or left in place.


Wood Chip Filter Berms should be aligned parallel to existing contours and located below all disturbed areas. They are not recommended for use within 50 feet of receiving surface water.

The maximum slope length above a Wood Chip Filter Berm should not exceed those shown for the Reinforced Silt Fence in Table 4.3 (on pg. 15).

Wood Chip Filter Berms should be constructed as shown in Standard Construction Detail # 4-12 (on pg. 18).

STANDARD CONSTRUCTION DETAIL # 4-12

Wood Chip Filter Berm

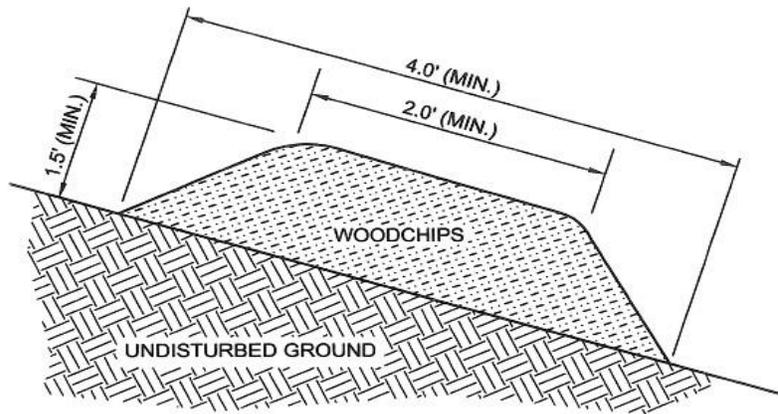

Prior to placement of the berm, obstructions such as tree limbs, large rocks, etc. shall be removed.

Wood Chip Filter Berms shall be placed at existing level grade. Both ends of the berm shall be extended at least 8 feet up slope at 45 degrees to the main barrier alignment (see Figure 4.1 on pg. 13). Wood Chip Berms may not be located in areas of concentrated flow or used to construct sediment traps or other impoundments.

A 6" thick layer of compost shall be added to the upslope side of any Wood Chip Filter Berm located in a Special Protection Watershed.

Berms shall be inspected weekly and after each runoff event. Sediment shall be removed when accumulations reach 1/2 the above ground height of the berm. Damaged or deteriorated portions of the berm shall be replaced immediately upon inspection.

Berms may be leveled when the tributary area has been permanently stabilized or left in place.



ROCK FILTER

Rock Filters may be used to control runoff within constructed channels (at the downstream end of the channel, during construction) until the protective lining is installed or during a temporary disturbance within the channel. Rock Filters may not be used to control disturbed areas tributary to the channel in which they are placed.

Rock Filters may not be used in lieu of appropriate channel linings. This practice often results in overtopping of the channel during storm events, scouring of the channel bottom below the filter, or erosion of the channel side slopes as sediment deposits build up behind the filter. Rock Filters may not be used in roadside ditches in lieu of a suitable temporary protective liner until vegetation is established except at the inflows to ditch relief culverts. Ditch relief culverts reduce road sediment delivery to nearby streams by diverting sediment-laden ditch water onto stabilized areas (i.e. such as a forest floor) where it can infiltrate and be filtered.

Rock Filters should be constructed according to the specifications shown in Standard Construction Detail # 4-14 (on pg. 20).

Rock Filters should be constructed with Rip-rap sized as follows: (see Chart RRSC #1 on pg. 19)

- For channels with Total Depth > 3 feet, use R-4.
- For channels with Total Depth between 2 and 3 feet, use R-3.

Rock Filters should not be used in channels of less than 2 feet total depth and they should be equal in height to ½ the total depth of the channel with a 6” depression in the center.

A one foot thick layer of AASHTO #57 (i.e. 2B stone) or smaller should be placed on the upstream side of the filter. In special protection watersheds, a 6” layer of compost should be placed and anchored on top of the filter stone. NOTE: Filter fabric and straw bales should not be used in Rock Filters!




Rock Filters should be inspected weekly and after each runoff event. Clogged filter stone (AASHTO # 57) should be replaced and needed repairs be initiated after the inspection.

RIP – RAP (R) SIZING CHART - RRSC #1

American Association of State Highway and Transportation Officials (AASHTO)						
Rock Size	R-3	R-4	R-5	R-6	R-7	R-8
2”	0-15%					
3”	15-50%	0-15%				
4”			0-15%			
6”	100%	15-50%				
9”			15-50%	0-15%		
12”		100%			0-15%	
15”				15-50%		0-15%
18”			100%		15-50%	
24”				100%		15-50%
30”					100%	
42”						100%
Minimum Thickness	12”	18”	24”	30”	36”	48”

STANDARD CONSTRUCTION DETAIL # 4-14

Rock Filter

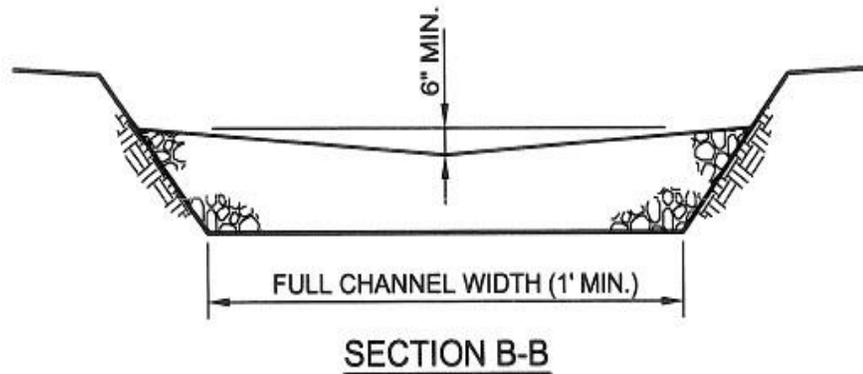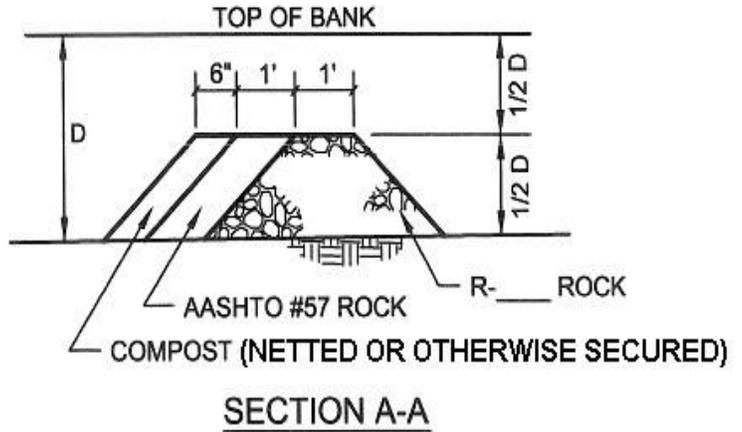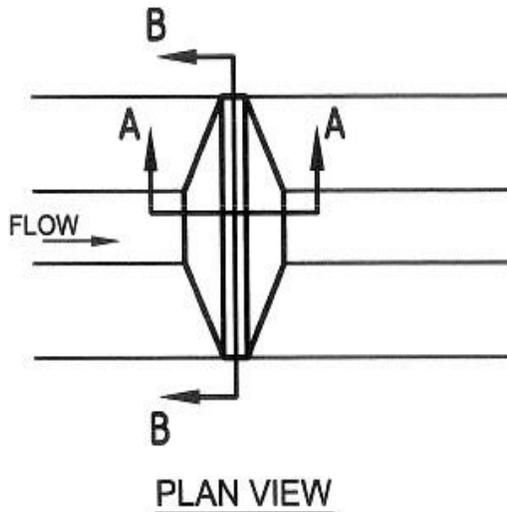

FOR 3' < D USE R-4
FOR 2' < D < 3' USE R-3
NOT APPLICABLE FOR D

< 2'

ROCK FILTER NO.	LOCATION	D (FT.)	RIPRAP SIZE
-----------------	----------	---------	-------------

Sediment must be removed when accumulations reach 1/2 the height of the filter.

Immediately upon stabilization of each channel, remove accumulated sediment, remove Rock Filter, and stabilize disturbed areas.



WATERBAR


Waterbars are typically used to control stormwater runoff on retired access roads and skid trails as well as pipeline and utility line right-of-ways. They are not recommended for active access roads or skid trails due to the difficulty of moving equipment over them as well as the need for continual maintenance due to damage from traffic. Where Waterbars are used on active access roads, it is necessary to provide reinforcement of the berm with a log, steel pipe, etc. to maintain the integrity of the Waterbar between

maintenance operations. All such Waterbars should be restored to original dimensions at the end of each work day. Waterbars are not appropriate for incised roadways, where there is no opportunity to discharge runoff to either side.

Waterbars may be used to direct runoff to well-vegetated areas or sediment removal facilities (e.g. temporary). They should discharge to the downslope side of the access road, skid trail, or right-of-way so that runoff will flow away from, not back onto the roadway, skid trail, or right-of-way. A 2% maximum gradient is recommended to ensure proper discharge of water entering the Waterbar. Steeper gradients should be avoided to prevent erosion of the Waterbar. Wherever erodible soils are present, or where there is not a sufficient vegetative filter strip between the Waterbar and a receiving surface water, the Waterbar should be provided with a temporary protective liner. All Waterbars should be vegetated whenever possible. Obstructions, (e.g. Straw Bales Barriers, Silt Fence, Rock Filters, etc.) should not be placed in or across Waterbars.

STANDARD CONSTRUCTION DETAIL #3-5

Waterbar

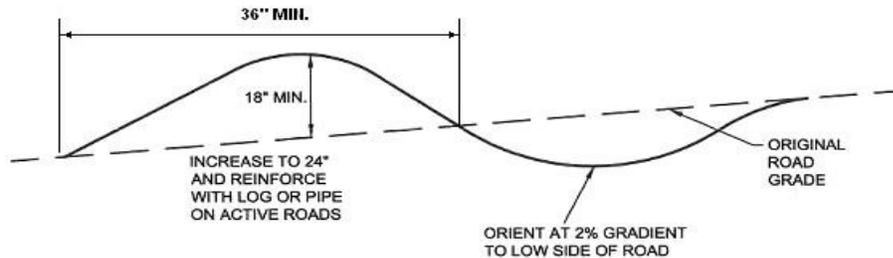

Waterbars must discharge to a stable area.

Waterbars shall be inspected weekly (daily on active roads) and after each runoff event. Damaged or eroded Waterbars shall be restored to original dimensions within 24 hours of inspection.

Maintenance of Waterbars shall be provided until roadway, skidtrail, or right-of-way has achieved permanent stabilization.

Waterbars on retired roadways, skidtrails, and right-of-ways shall be left in place after permanent stabilization has been achieved.

TABLE 3.1 – WATERBAR SPACING

PERCENT SLOPE	SPACING (FT)
<5	250
5 - 15	150
15 - 30	100
>30	50



SEDIMENT FILTER LOG (FIBER LOG)


Sediment Filter Logs are tube-shaped devices filled with straw, flax, rice, or coconut fiber and wrapped with UV-degradable polypropylene netting, burlap, jute, or coir (i.e. material derived from coconut shell husk) for longevity. They may be used to control runoff from small disturbed areas where Filter Fabric Fence would normally be used as well as certain locations where Filter Fabric Fence is not typically effective (e.g. above headwalls and endwalls). In general, 8” diameter logs may be used on individual lots of < 0.5 acres that are tributary to a sediment basin or sediment trap. Twelve inch

(12”) logs may be used on slopes with lengths not exceeding those approved for Standard Silt Fence and eighteen inch (18”) logs may be used on slopes approved for Reinforce Silt Fence. However, longer

slope lengths will be considered by the Department on a case-by-case basis. Standard Construction Detail # 4-11 (on pg. 22) should be used for Sediment Filter Log installation and maintenance.

STANDARD CONSTRUCTION DETAIL # 4-11

Sediment Filter Log (Fiber Log)

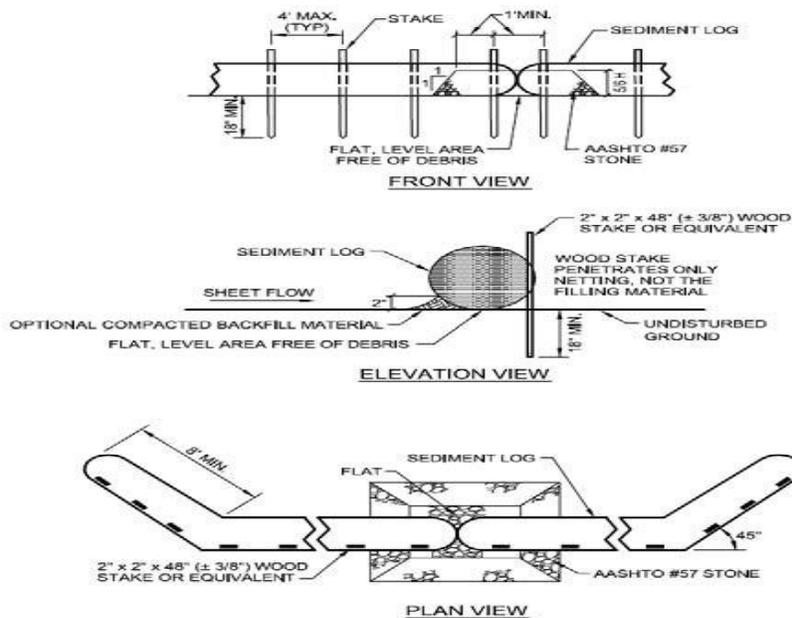


Sediment Filter Log placement area must be prepared so that it is free of all debris, including rocks, sticks, roots, etc. A 2” layer of compacted fill material shall be placed on the upslope side of the log to

prevent undercutting. Where more than one log is required to obtain specified length, logs shall be tightly abutted and securely staked. A 2" layer of AASHTO #57 stone shall be placed where the logs come together. A 6" layer of compost may be substituted for the stone. Sediment Filter Logs shall be placed at existing level grade. Ends shall be extended upslope at 45° to the main Sediment Filter Log alignment for a minimum of 8 feet.

Sediment Filter Logs shall be inspected weekly and after each runoff event. Sediment deposits shall be cleaned from the log when it reaches ½ the height of the log. Damaged Sediment Filter Logs shall be replaced within 24 hours of inspection. A supply of Sediment Filter Logs must be maintained on site for this purpose.

PERMANENT DIVERSION CHANNELS OR TEMPORARY SWALES

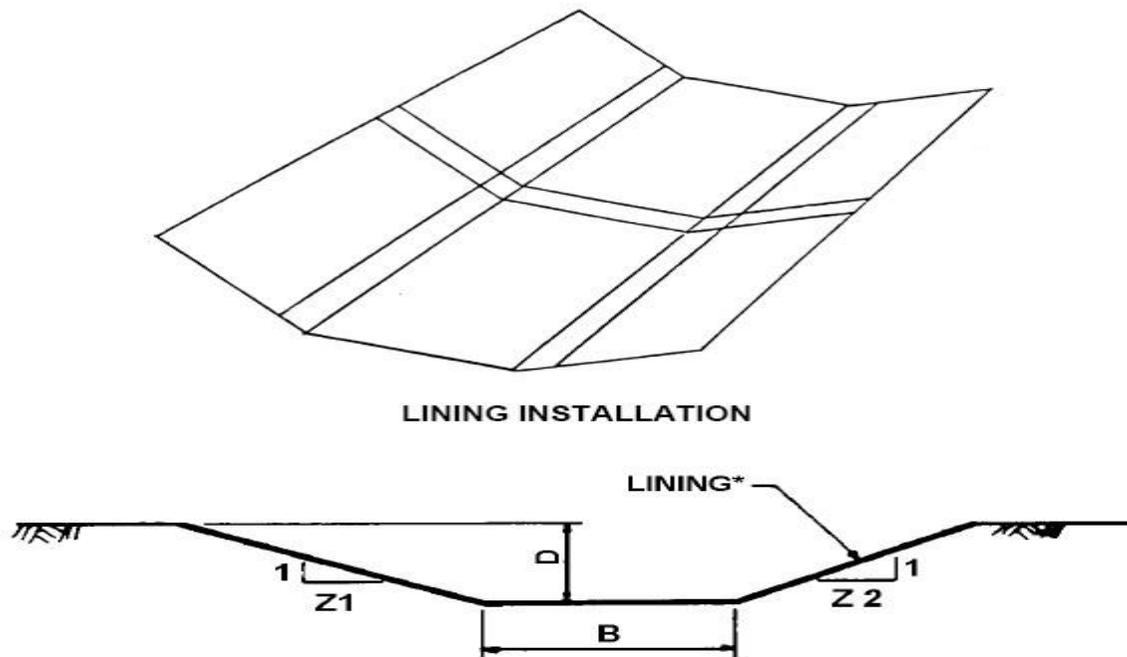

Flow Channel Stabilization	
Channel Grade	Type of Stabilization
0.5 – 1.0%	Seed and Mulch
1.0 – 2.5%	Jute Matting (or equivalent) with mulch
2.5 – 8.0%	*Sod Lining
*Requires rock apron or some other device to slow the velocity of the water	

INSTALLATION

- Remove all trees and shrubs that may interfere with the functioning of the channel/swale.
- The channel/swale should be excavated to the required depth and slope. Fills should be compacted by earthmoving equipment.
- Seed, mulch, and a specified erosion control matting should be placed immediately after final grade is reached.

MAINTENANCE

- Periodic maintenance should be performed. Any eroded areas should be seeded/mulched and erosion control matting should be immediately installed. Erosion resulting from concentrated water flows

should be restabilized with an appropriate erosion control matting designed to meet the specifications of the existing slope.


RESTRICTIONS

- All channels/swale should have uninterrupted positive grade to a stabilized outlet.
- Diverted runoff from a disturbed area (i.e. construction site) should be conveyed to a sediment-trapping device (i.e. Rock Filter/Rip-rap Apron).
- Diverted runoff from an undisturbed area shall outlet directly into an existing stabilized area at a nonerosive velocity.
- Maximum drainage area for Permanent Diversion Channels is 5 acres, and maximum slope of Temporary Swales is 8%.

NOTES

- Earthen berms are to be used for the same purpose as Permanent Diversion Channels or Temporary Swales and follow the same restrictions as listed above.

**STANDARD CONSTRUCTION DETAIL # 9-2
Riprap Apron at Pipe Outlet Without Flared Endwall**

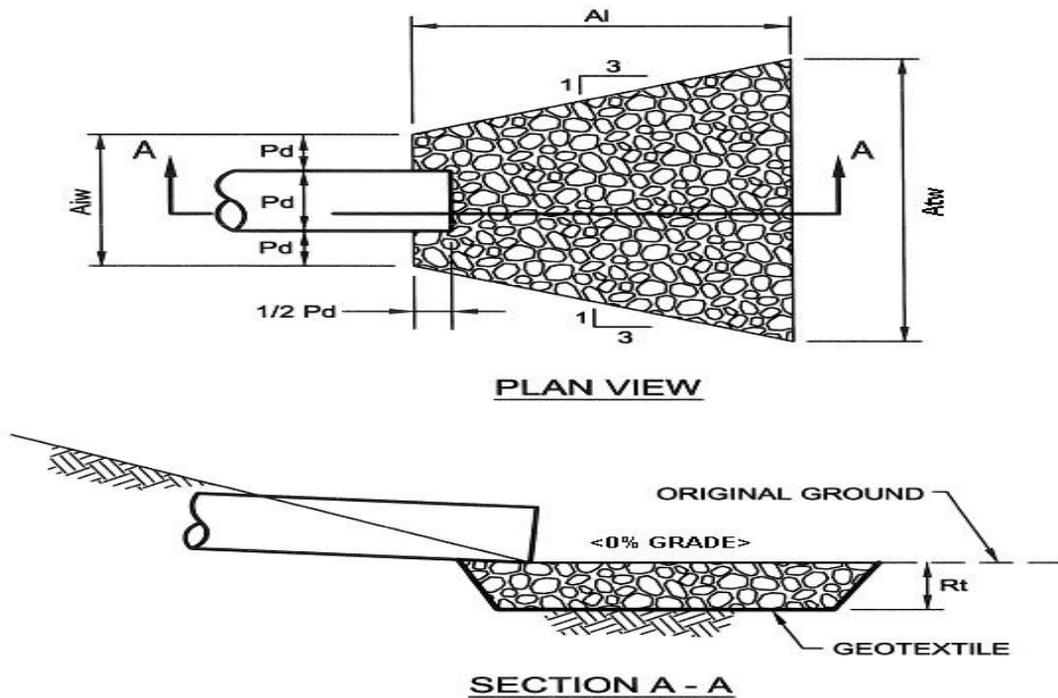

Outlet No.	Pipe DIA P_d (in)	RipRap		Apron		
		Size (R-)	Thick. R_t (In)	Length A_I (FT)	Initial Width A_{iw} (FT)	Terminal Width A_{tw} (Ft)

Construct all Rip-rap Aprons to the dimensions shown. Adjust terminal widths as necessary to match receiving channels. Extend riprap on back side of apron to at least 1/2 depth of pipe on both sides to prevent scour around the pipe. Inspect all Rip-rap Aprons on a weekly basis and after each runoff event. Replace displaced riprap within the apron immediately.


APPENDIX "D"

STORMWATER FACILITIES CONSTRUCTION DETAIL

NOTES:

- ALL RUN-OFF FROM NEWLY BE DIVERTED TO A PROPERLY SIZED SUMP AS SHOWN.
- INVERTS OF INLET & OUTLET PIPES IN SUMP TO BE EQUAL
- INLET & OUTLET PIPES SHALL BE 4" (MIN.)
- SUMP DIMENSIONS (L,W,D) SHALL BE DETERMINED BY THE FORMULA BELOW AND THE ACTUAL BUILDING PLANS.
- SUMP LENGTH (L) SHOULD BE TWICE THE WIDTH (W) OR MORE.
- MINIMUM SUMP DEPTH (D) = 4'.
- SUMP EDGE SHALL BE 10' OR MORE FROM A PROPERTY LINE.
- SUMP EDGE SHALL BE 15' OR MORE FROM A SEPTIC SYSTEM.

CONSTRUCTED ROOFS SHALL

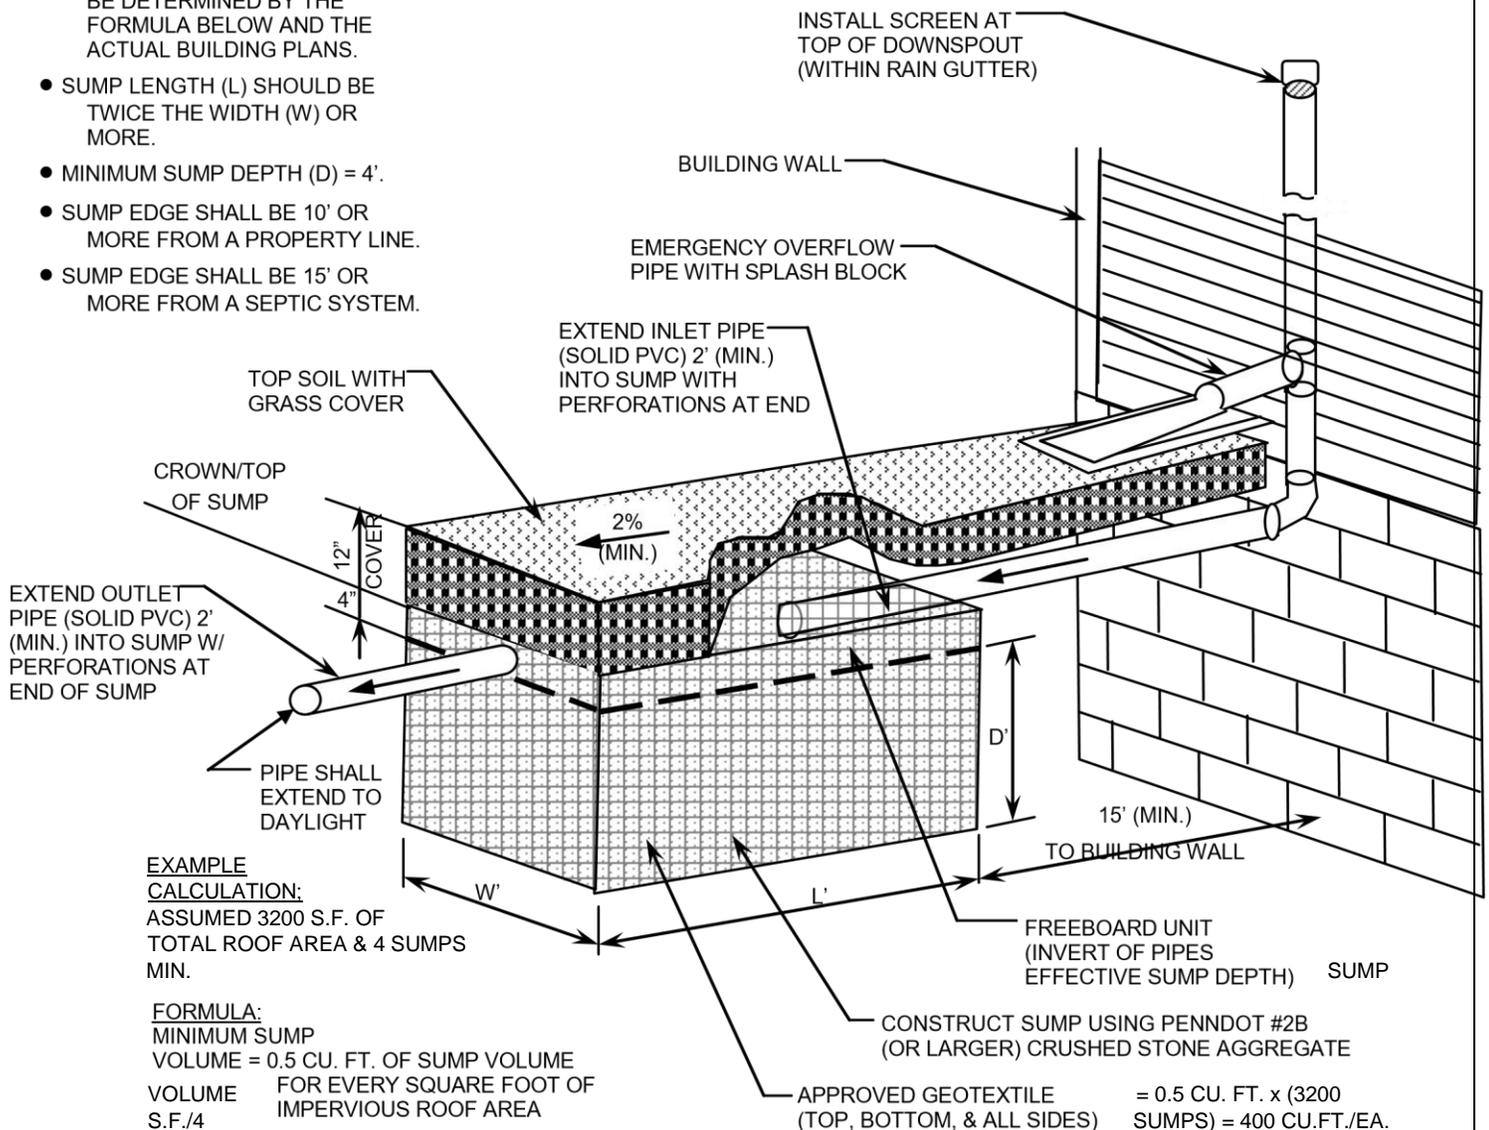


ROOF DRAIN SUMP DETAIL

THEREFORE, USE SUMP SIZE OF: 15' LONG x 7' WIDE x 4' DEEP (EACH)

APPENDIX "B"

BMP 6.4.5: Rain Garden/Bioretention

RECHARGE GARDEN / BIORETENTION BED

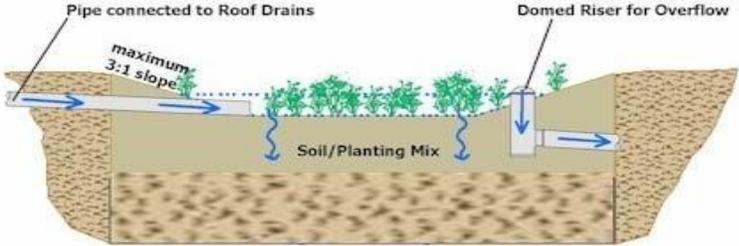

A Rain Garden (also called Bioretention) is an excavated shallow surface depression planted with specially selected native vegetation to treat and capture runoff.

<p style="text-align: center;"><u>Key Design Elements</u></p> <p>Flexible in terms of size and infiltration Ponding depths generally limited to 12 inches or less for aesthetics, safety, and rapid draw down. Certain situations may allow deeper ponding depths.</p> <p>Deep rooted perennials and trees encouraged</p> <p>Native vegetation that is tolerant of hydrologic variability, salts and environmental stress</p> <p>Modify soil with compost</p> <p>Stable inflow/outflow conditions</p> <p>Provide positive overflow</p> <p>Maintenance to ensure long-term functionality</p>	<p style="text-align: center;"><u>Potential Applications</u></p> <p>Residential Commercial Urban/ Industrial Highway/Road:</p> <hr/> <p style="text-align: center;"><u>Stormwater Functions</u></p> <p>Volume Reduction: Medium Recharge: Med/High Peak Rate Control: Low/Med. Water Quality: Med./High</p> <hr/> <p style="text-align: center;"><u>Water Quality Functions</u></p> <p style="text-align: center;">TSS:</p> <p>TP:85% 85% NO3:30%</p>
---	--

Bioretention is a method of treating stormwater by pooling water on the surface and allowing filtering and settling of suspended solids and sediment at the mulch layer, prior to entering the plant/soil/microbe complex media for infiltration and pollutant removal. Bioretention techniques are used to accomplish water quality improvement and water quantity reduction.

Bioretention can be integrated into a site with a high degree of flexibility and can balance nicely with other structural management systems, including porous asphalt parking lots, infiltration trenches, as well as nonstructural stormwater BMPs.

The vegetation serves to filter (water quality) and transpire (water quantity) runoff, and the root systems can enhance infiltration. The plants take up pollutants (i.e. the soil medium filters out pollutants and allows storage and infiltration of stormwater runoff) and the bed provides additional volume control. Properly designed bioretention techniques mimic natural ecosystems through species diversity, density and distribution of vegetation, and the use of native species resulting in a system that is resistant to insects, disease, pollution, and climatic stresses.

Stream Classifications-

County

Water

Uses

Protected

Stream (numbers indicate hydrological order)	Zone	County	Water Uses
2—Unnamed Tributaries to Susquehanna River	Basins (all sections in PA), Source to PA-NY State Border near Lanesboro	Susquehanna	CWF, MF
1—Susquehanna River	Main Stem, PA-NY State Border near Lanesboro to PA-NY State Border near Great Bend	Susquehanna	WWF, MF
2—Unnamed Tributaries to Susquehanna River	Basins, (all sections in PA) PA-NY State Border near Lanesboro to PA-NY State Border near Great Bend	Susquehanna	CWF, MF
2—Cascade Creek	Basin (all sections in PA)	Susquehanna	CWF, MF
2—Hilborn Creek	Basin	Susquehanna	CWF, MF
2—Starrucca Creek	Basin, (all sections in PA) Unnamed Tributary at RM 11.68 to Mouth	Susquehanna	CWF, MF
2—Canawacta Creek	Basin	Susquehanna	CWF, MF
2—Drinker Creek	Basin	Susquehanna	CWF, MF
2—Lewis Creek	Basin	Susquehanna	CWF, MF
2—Bedbug Brook	Basin	Susquehanna	CWF, MF
2—Denton Creek	Basin (all sections in PA)	Susquehanna	CWF, MF
2—Mitchell Creek	Basin	Susquehanna	CWF, MF
2—Little Egypt Creek	Basin	Susquehanna	CWF, MF
2—Salt Lick Creek	Basin	Susquehanna	HQ-CWF, MF
2—DuBois Creek	Basin	Susquehanna	CWF, MF
2—Trowbridge Creek	Basin (all sections in PA)	Susquehanna	CWF, MF

2—Unnamed Tributaries to Susquehanna River	Basins (all sections in PA), PA-NY State Border near Great Bend to PA-NY State Border near Milltown	Susquehanna-Bradford	CWF, MF
2—Snake Creek	Basin, Source to Silver Creek	Susquehanna	CWF, MF
3—Silver Creek	Basin, Source to Laurel Lake Creek	Susquehanna	EV, MF
4—Laurel Lake Creek	Basin, Source to McCormick Run	Susquehanna	CWF, MF
5—McCormick Run	Basin	Susquehanna	EV, MF
4—Laurel Lake Creek	Basin, McCormick Run to Mouth	Susquehanna	CWF, MF
3—Silver Creek	Basin, Laurel Lake Creek to Mouth	Susquehanna	EV, MF
2—Snake Creek	Basin, Silver Creek to PA-NY State Border (all sections in PA)	Susquehanna	CWF, MF
2—Little Snake Creek	Basin (all sections in PA)	Susquehanna	CWF, MF
2—Choconut Creek	Basin (all sections in PA)	Susquehanna	WWF, MF
2—Apalachin Creek	Basin, Source to Bow Bridge Creek	Susquehanna	CWF, MF
3—Bow Bridge Creek	Basin	Susquehanna	HQ-CWF, MF
2—Apalachin Creek	Basin, Bow Bridge Creek to Cork Hill Creek	Susquehanna	CWF, MF
3—Cork Hill Creek	Basin (all sections in PA)	Susquehanna	HQ-CWF, MF
2—Apalachin Creek	Basin (all sections in PA), Cork Hill Creek to PA-NY State Border	Susquehanna	CWF, MF
2—Apalachin Creek (NY)			
3—Unnamed Tributaries to Apalachin Creek	Basins (all sections in PA), PA-NY State Border to Mouth	Susquehanna	CWF, MF
2—Wyalusing Creek			
3—East Branch Wyalusing Creek	Main Stem, Source to Confluence with Middle Branch	Susquehanna	CWF, MF
4—Unnamed Tributaries to East Branch Wyalusing Creek	Basins	Susquehanna	CWF, MF
4—Beebe Creek	Basin	Susquehanna	CWF, MF
4—Pettis Creek	Basin	Susquehanna	WWF, MF

4—Forest Lake Creek	Basin	Susquehanna	CWF, MF
4—South Branch	Basin	Susquehanna	WWF, MF
4—Roe Creek	Basin	Susquehanna	CWF, MF
4—Snell Creek	Basin	Susquehanna	CWF, MF
4—Devel Creek	Basin	Susquehanna	CWF, MF
4—Elk Lake Stream	Basin	Susquehanna	CWF, MF
4—Deer Lick Creek	Basin	Susquehanna	CWF, MF
3—Middle Branch Wyalusing Creek	Basin, Source to Confluence with East Branch	Susquehanna	CWF, MF
3—North Branch Wyalusing Creek	Basin, Source to Gaylord Creek	Susquehanna	CWF, MF
4—Gaylord Creek	Basin, Source to Bradford-Susquehanna County line at 41°53'4.6"N; 76°8'6.4"W	Bradford-Susquehanna	HQ-CWF, MF
4—Gaylord Creek	Basin, Bradford-Susquehanna County line to Mouth	Susquehanna	CWF, MF
3—North Branch Wyalusing Creek	Basin, Gaylord Creek to Mouth	Susquehanna	CWF, MF
2—Tunkhannock Creek	Basin, Source to UNT 29200 at 41°48'18.8"N; 75°34'50.6"W	Susquehanna	CWF, MF
3—UNT 29200 to Tunkhannock Creek	Basin	Susquehanna	EV, MF
2—Tunkhannock Creek	Basin, UNT 29200 to Rock Creek	Susquehanna	CWF, MF
3—Rock Creek	Basin	Susquehanna	HQ-CWF, MF
2—Tunkhannock Creek	Basin, Rock Creek to East Branch Tunkhannock Creek	Susquehanna	CWF, MF
3—East Branch Tunkhannock Creek	Basin, Source to Dundaff Creek	Susquehanna	CWF, MF
4—Dundaff Creek	Basin, Source to UNT at RM 4.39 (Newton Lake Outlet)	Susquehanna	CWF, MF
5—UNTs to Dundaff Creek at RM 4.39	Basin	Susquehanna	WWF, MF



CLUES TO WETLAND IDENTIFICATION: QUESTIONS FOR DEVELOPERS, CONTRACTORS, SURVEYORS, FARMERS AND LAND OWNERS

Wetlands are areas where ground and/or surface water lingers for brief periods of time during the growing season (see Department of Environmental Protection (DEP) fact sheet, *An Introduction to Wetlands* and the enclosed map, "Growing Seasons for Wetland Hydrology").

In Pennsylvania, wetlands are protected by both state and federal regulations and may also be protected by local (municipal) regulations or ordinances. Wetlands are valuable because they function in ways that benefit the natural world, including the human community (see DEP fact sheet, *Wetlands: Functions at the Junctions*).

ARE WETLANDS PRESENT ON THE SITE? Take a walking inventory of fields, forests and woodlots. Ask the following questions:


- | Yes | No | |
|--------------------------|--------------------------|--|
| <input type="checkbox"/> | <input type="checkbox"/> | Are there open bodies of water, ponds, lakes, streams, or reservoirs? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are there natural drainage channels (permanent or temporary)? |
| <input type="checkbox"/> | <input type="checkbox"/> | Is the ground soggy or spongy under foot at any time during the growing season (see "Growing Seasons" map)? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are there "low spots" or depressions where water lies or pools for more than seven days during the growing season? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are swales, springs or seeps present? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are there areas that should not be crossed with vehicles, tractors or other machinery for fear of "getting stuck"? |
| <input type="checkbox"/> | <input type="checkbox"/> | Has the site been "ditched" or "tiled" in spots to "dry it out"? |
| <input type="checkbox"/> | <input type="checkbox"/> | Do some plants have roots growing from their stems, above the soil line? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are these plants present: cattails, sedges (frequently with triangular stems), iris (flags), arrowheads, joe pyeweed, touch-me-not (jewelweed), rushes, sensitive fern, ironweed or skunk cabbage? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are these trees or saplings present: willows, red or silver maples, box elders, black or green ash, sycamore or black gum? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are tree trunks expanded or swollen at the base? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are any trees "blown down" (windthrows), exposing a shallow but extensive root system? |
| | <input type="checkbox"/> | Are any of these shrubs present: blueberry, bush-type dogwoods (for example, red osier), alders, buttonbush or spicebush? |
| | <input type="checkbox"/> | Are there cleared areas where water has scoured the surface and removed the plants? |
| | <input type="checkbox"/> | Are there places where fallen leaves are discolored gray or black? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are there silt/sedimentation deposits on decaying leaves lying on the ground or on living plant leaves, or on stems or tree trunks? |
| <input type="checkbox"/> | <input type="checkbox"/> | Are there drift lines (wrack lines) where sticks, leaves and other water-carried debris have lodged along a contour or at the base of vegetation? |

Yes No

- Is there a dark-brown layer of organic matter, over two inches thick, on the soil surface?
- Does sphagnum moss (a lush, green, juicy moss) cover the site?
- Is the soil composed primarily of peat (decaying sphagnum moss)?
- Does the soil smell like rotten eggs (sulfur)?
- Digging to a depth of 18 inches, is the soil color gray, gray-blue or gray-green or marked with spots, streaks or lines of different color? Note: In agricultural fields, these characteristics are observed below the plow-line.
- Does a soil test pit (a hole dug to 18 inches) fill with water or does water "trickle down the sides"?

If the answer is "Yes" to any of these questions, a wetland may be present on the property.

Further information and assistance is available. Observe! Ask questions! Be alert to changes in state and federal regulations! Be aware of local regulations/ordinances! Seek professional advice at state, federal and private levels! **It is important to note that permits are normally needed before any work is performed in a wetland.** Contact: regional offices of DEP Bureau of Waterways Engineering and Wetlands, Division of Wetlands, Encroachments and Training, the local county conservation district, or the Natural Resource Conservation Service.

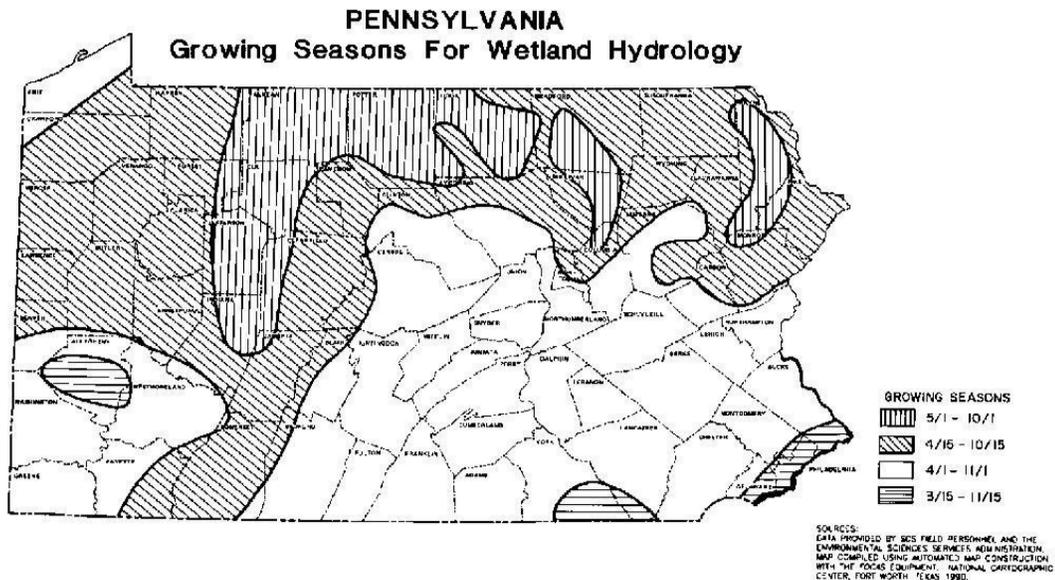

For more information, visit www.dep.state.pa.us, keyword: Wetlands,
or contact:

Department of Environmental Protection
Bureau of Waterways Engineering and Wetlands
Division of Wetlands, Encroachments and Training
P.O. Box 8460
Harrisburg, PA 17105-8460
717-787-3411
Fax 717-772-0409

GLOSSARY

Aggregate -----Hard, tough, durable, particles, reasonably free from silt, clay, & vegetation. Coarse aggregates (those retained on a No. 4 sieve) are often used as filter stone.

Apron -----A covering along a shoreline or immediately below a pipe or channel outfall for protection against erosion.

Best Management Practice (BMP) -----A generally accepted practice for minimizing accelerated erosion and resultant sediment pollution to protect, maintain, reclaim and restore the quality of waters and the existing and designated uses of waters within this Commonwealth.

Channel Lining ----- The material applied to the bottom and/or sides of a natural or constructed channel to prevent or minimize abrasion, scour and other forms of erosion.

Disturbed Area -----That part of an earth disturbance project from which the vegetative cover has been removed to the extent that the potential for accelerated erosion exists.

Drainage Area -----The area above a BMP from which runoff would normally drain to that BMP.

Geotextile -----A fabric manufactured from synthetic fiber (usually non-biodegradable, either woven or non-woven) that is designed to achieve specific engineering objectives, including seepage control, separation of materials, filtration, or protection of other construction materials.

Grubbing -----The operation of removing stumps and roots.

Mulch -----A natural or artificial layer of plant residue or other materials placed on the soil surface to protect seeds, prevent blowing, retain soil moisture, curtail erosion, aid in establishing plant cover and minimize soil temperature fluctuations.

Outlet Protection -----An apron, dissipater, basin, or other device placed below a pipe or channel outfall to prevent scour.

Riprap -----Crushed stone which meets certain requirements for size gradation, weight, durability, and shape. It is generally specified according to "R" size.

Temporary Stabilization ----- Provision of immediate protection from accelerated erosion pending future disturbance, typically in the form of annual seed mixtures and/or mulch.

Waterbar -----A low berm constructed at an angle across the right-of-way of a pipeline or utility line to direct runoff away from the right-of-way onto a well-vegetated area.